


## TAILORED TO FIT YOUR TRUCK:

We tailor each truck cap to fit your specific truck, and the needs of your business and/or industry.

When we say "tailored", we mean it. One-size fits all designs waste valuable storage space. We tailor the dimensions of every X-ONE Truck Cap we build specifically to fit the truck it's ordered for. No wasted space. Maximum efficiency.

The dimensions shown in this booklet are for reference only. Upon ordering, we will send you a sheet that outlines the dimensions we need you to measure on your truck. We then build your truck cap to those dimensions. You will be supplied with detailed drawings of your truck cap prior to it entering production. The drawings you receive will include the accessories you choose, and actual dimensions of your truck cap, ready for your approval.

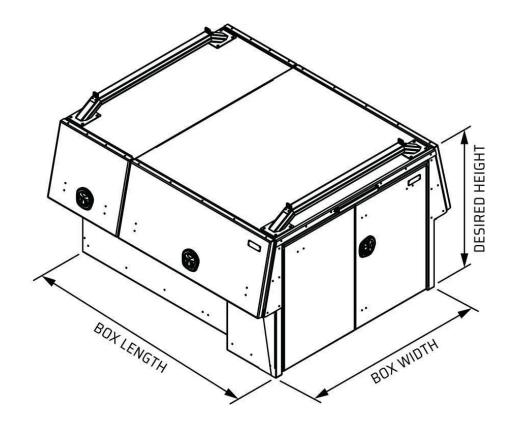

**BUILT FOR MOST MODERN PICKUPS:** 

CHEVY, DODGE (RAM), FORD, GMC, HONDA, JEEP, NISSAN & TOYOTA





### **STANDARD CONFIGURATIONS:**



**4-DOOR** (PAGE 4) Short Box, Regular Box & Long Box **PART #:** 3052, 3053, 3059

**GO TO 4-DOOR** 



**6-DOOR** (PAGE 23) Short Box, Regular Box & Long Box **PART #:** 3042, 3039, 3040

**GO TO 6-DOOR** 



**8-DOOR** (PAGE 42) Regular Box & Long Box **PART #:** 3060, 3061

**GO TO 8-DOOR** 




### **NEW! FLIP UP REAR DOOR**

Choose to swap the X-ONE's standard rear barn doors for a single flip-up door. **Now available for every size and configuration.** 






### **BED SIZES:**

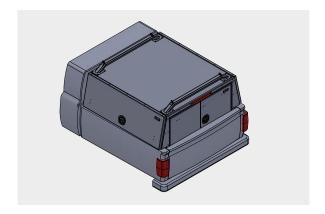


SHORT BOX (PAGE 3)

**GO TO SHORT BOX** 

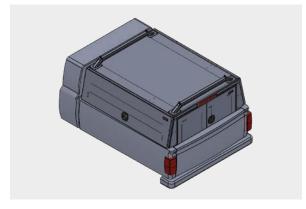

**REGULAR BOX** (PAGE 9)

**GO TO REGULAR BOX** 

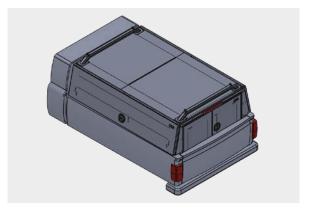

LONG BOX (PAGE 15)

**GO TO LONG BOX** 



### **NEW! FLIP UP REAR DOOR**

Choose to swap the X-ONE's standard rear barn doors for a single flip-up door. **Now available for every size and configuration.** 




#### X-ONE Truck Pack

SHORT BED (APROX 5.5FT.)

4 - DOOR


**CAB HEIGHT** 




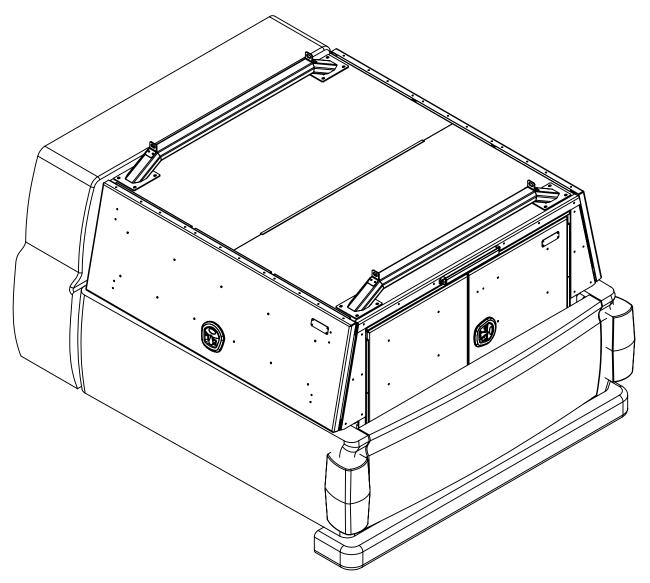



С

Δ

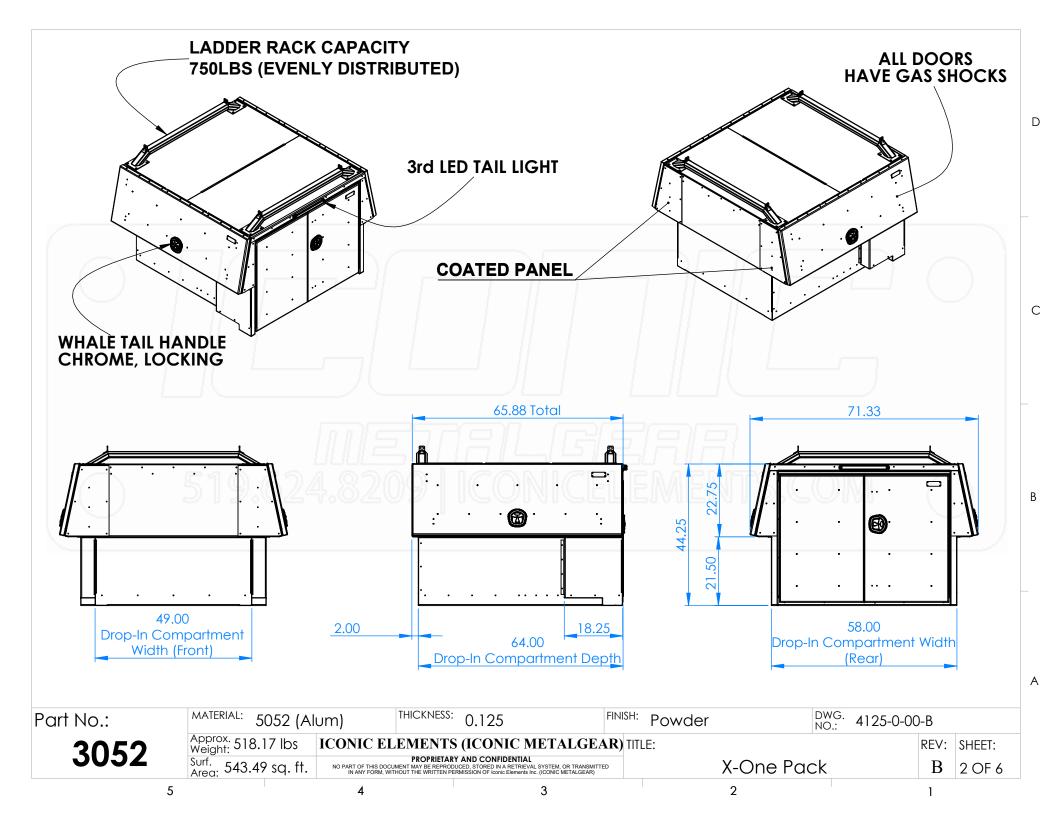


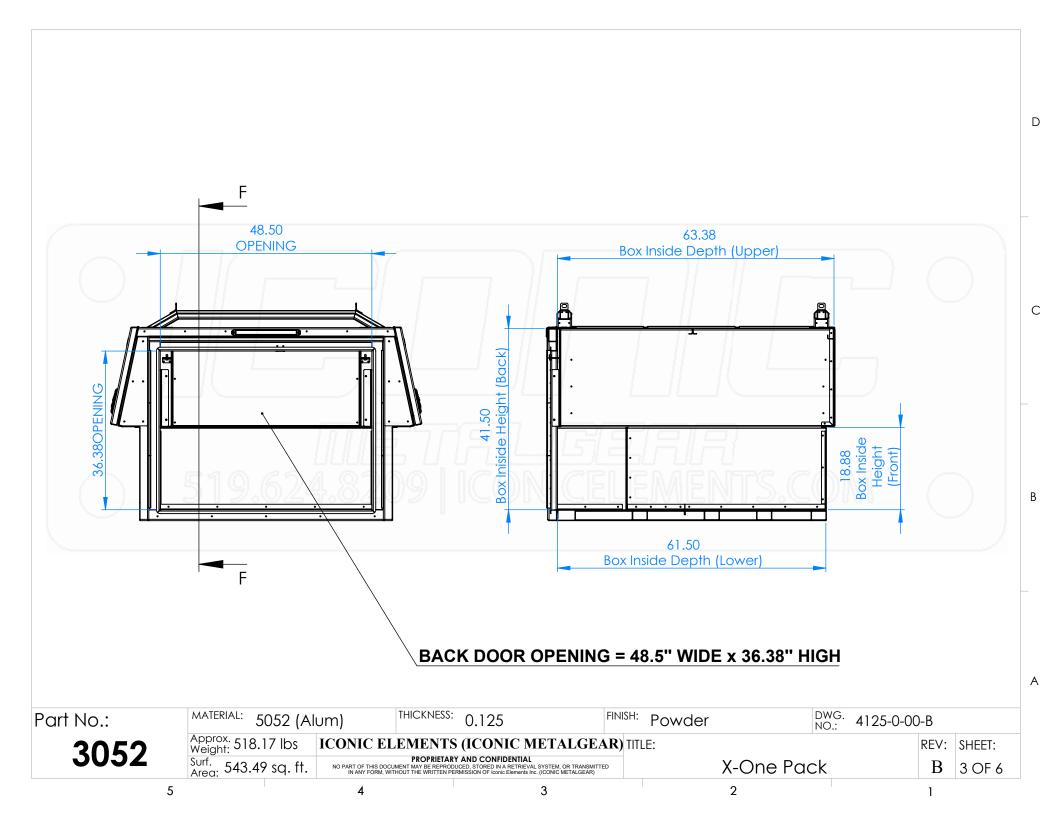


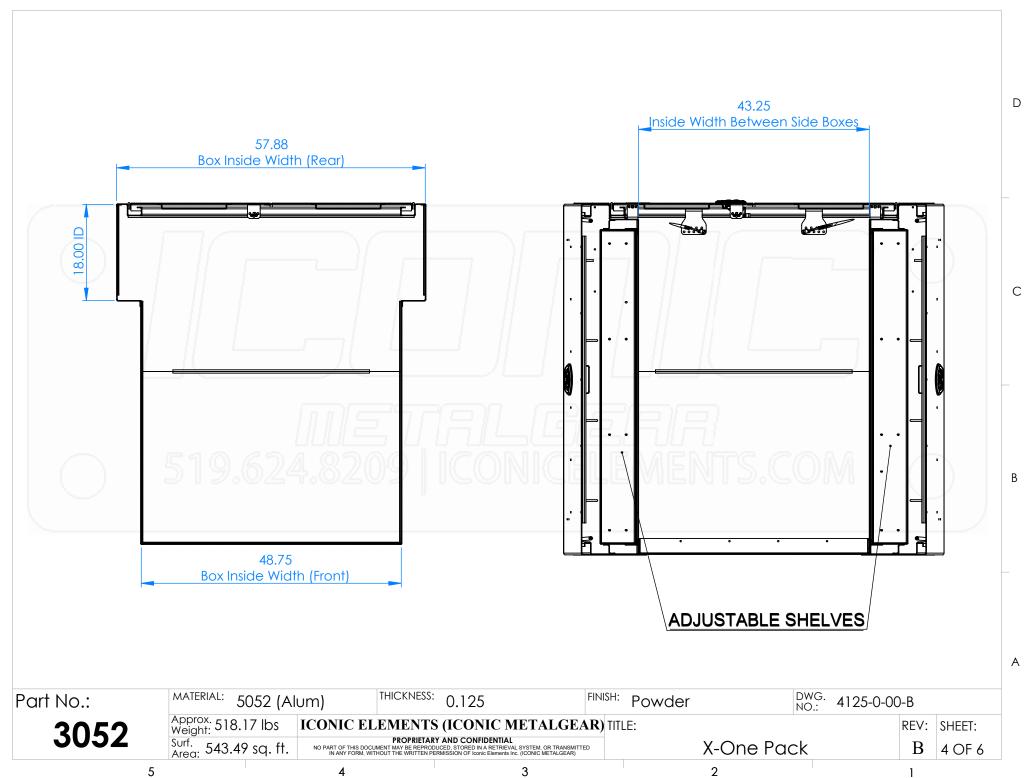


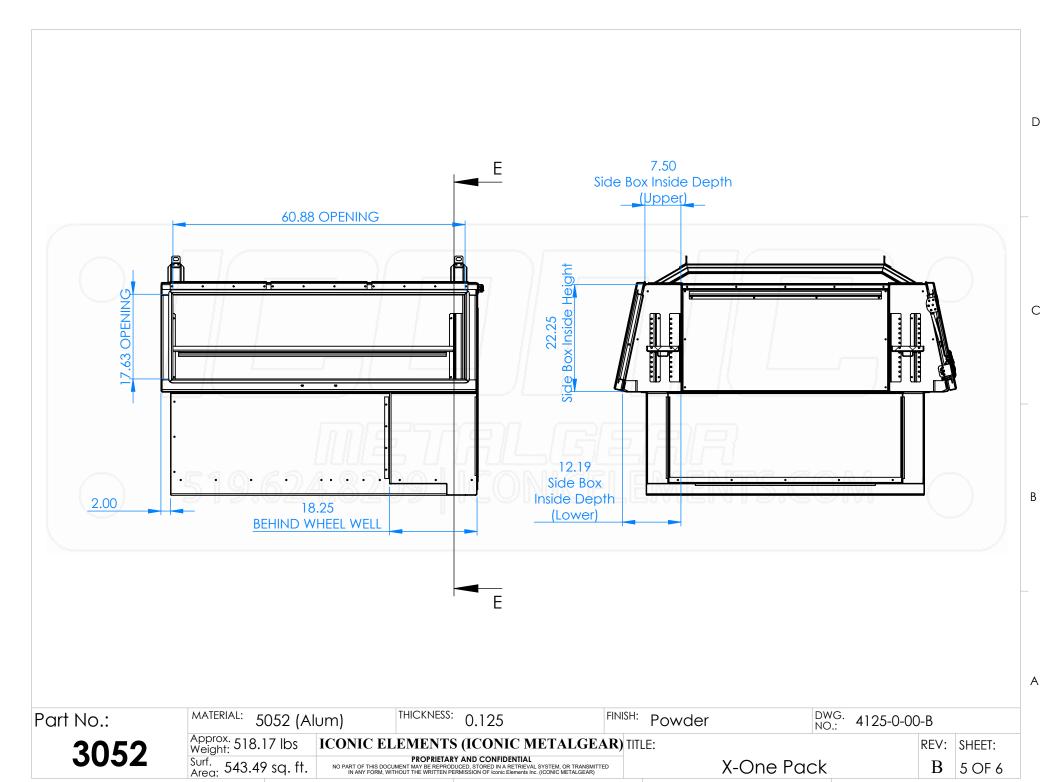



3 2

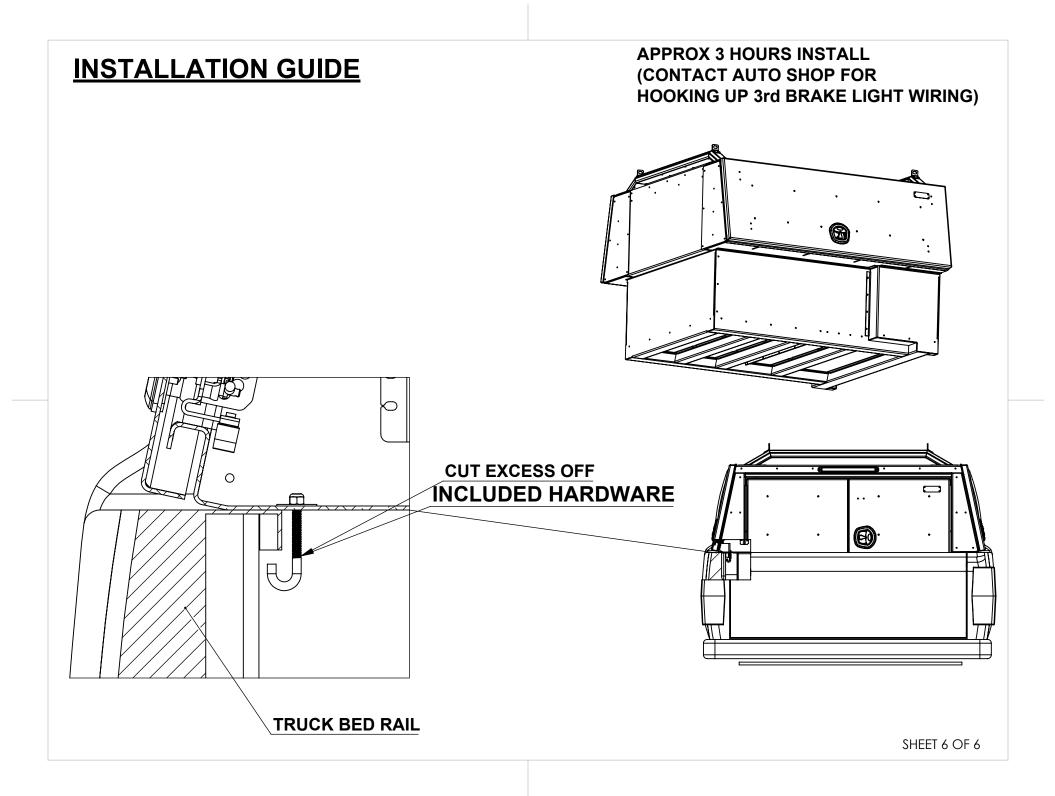


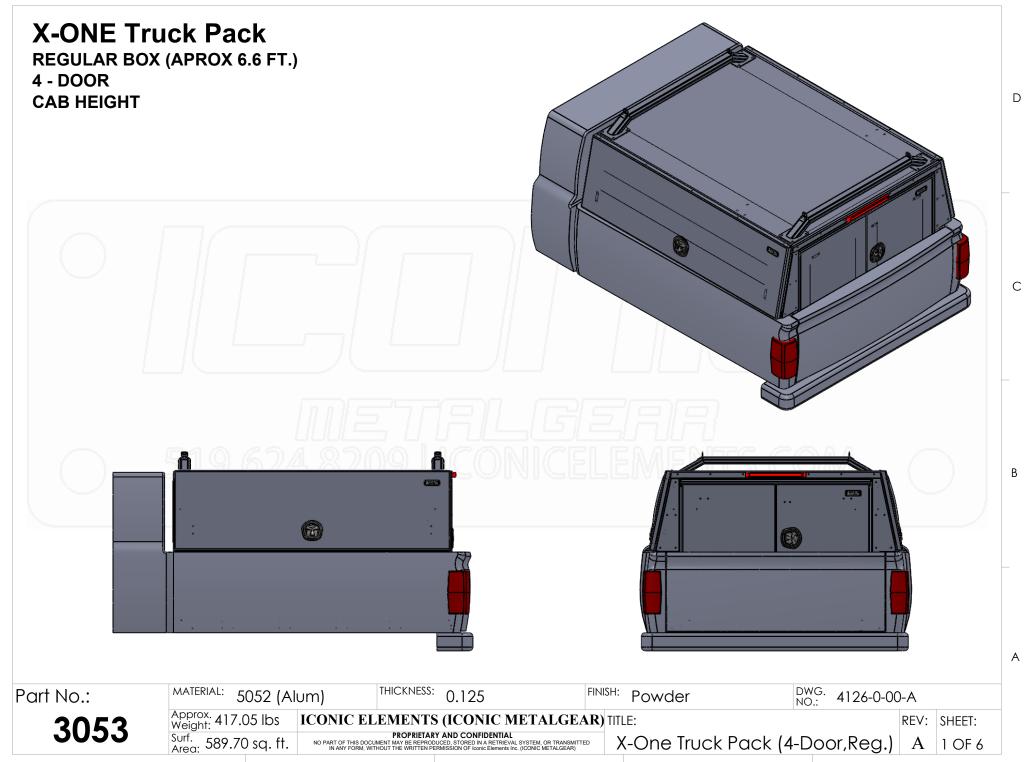


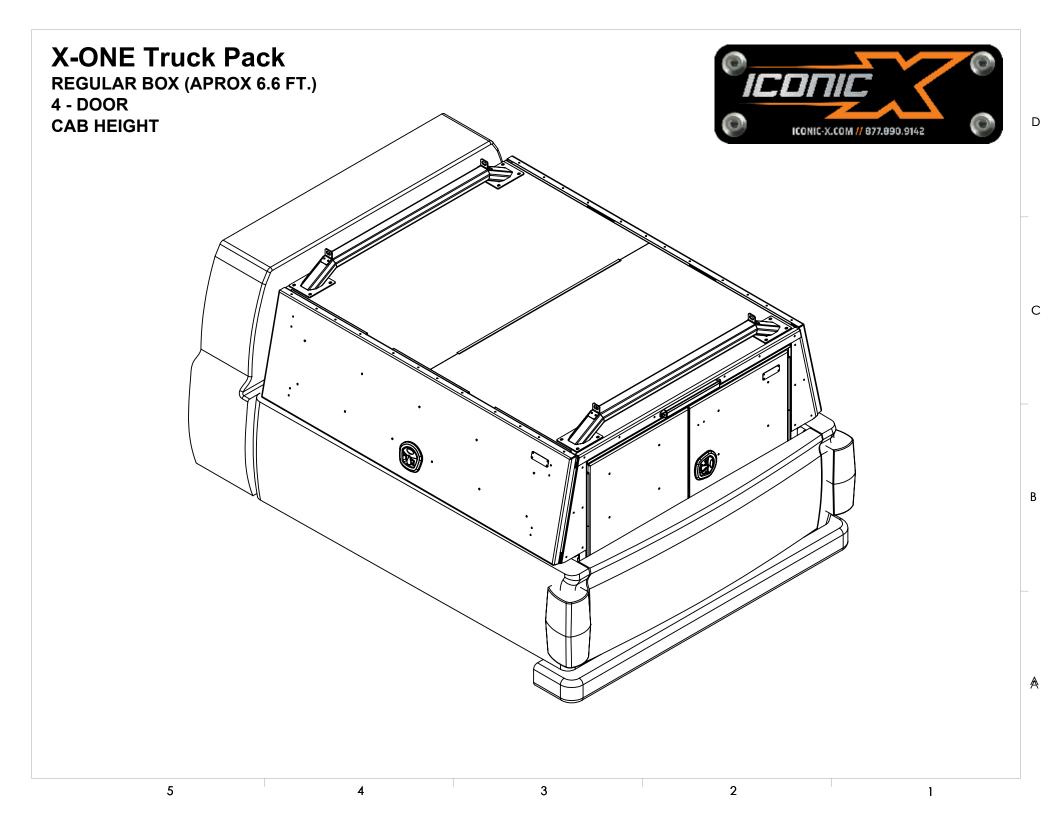

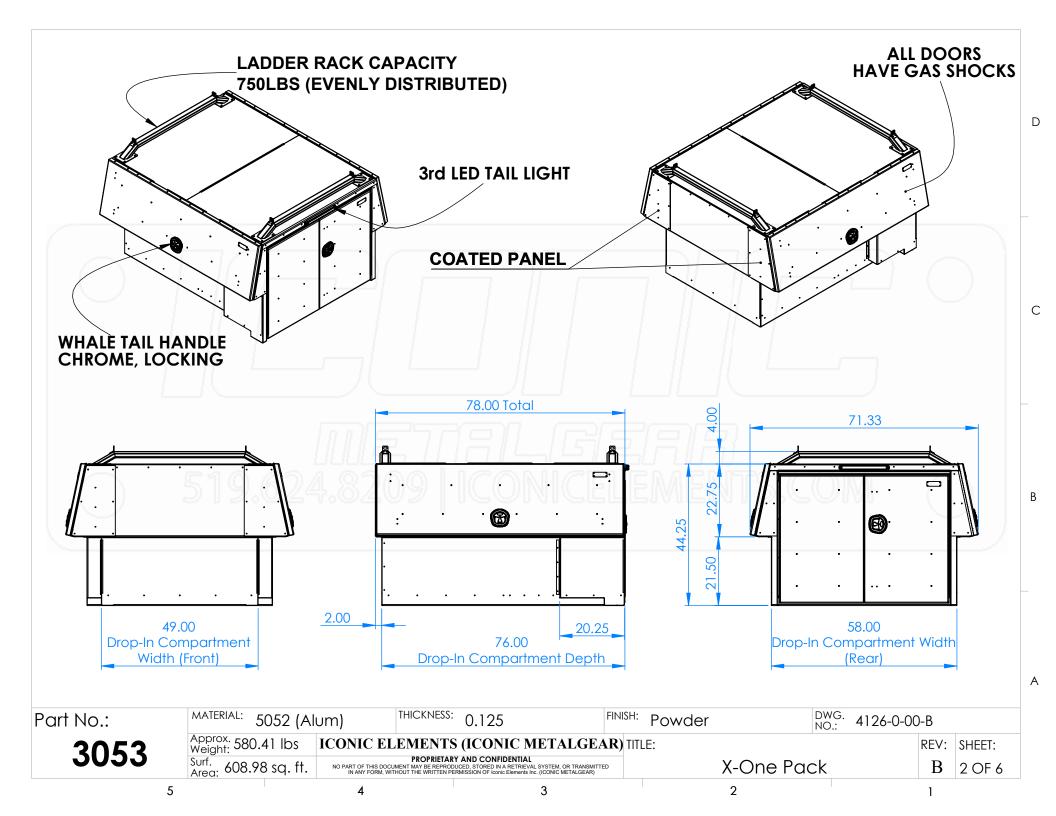

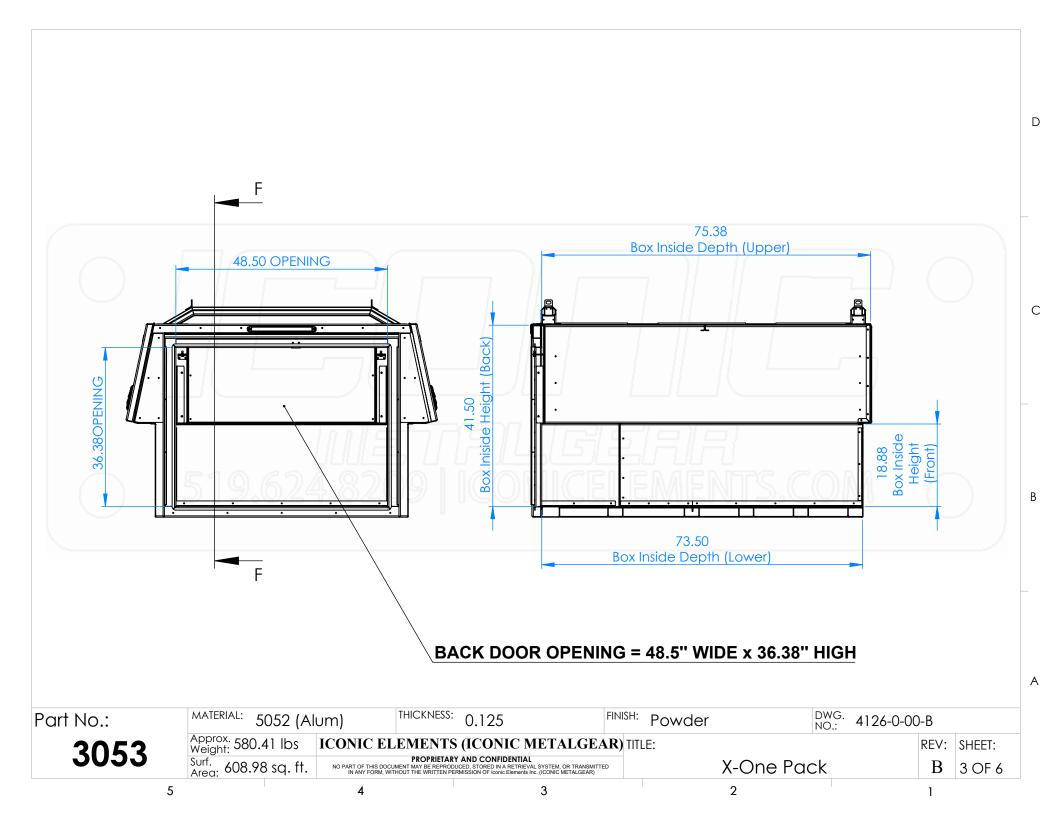


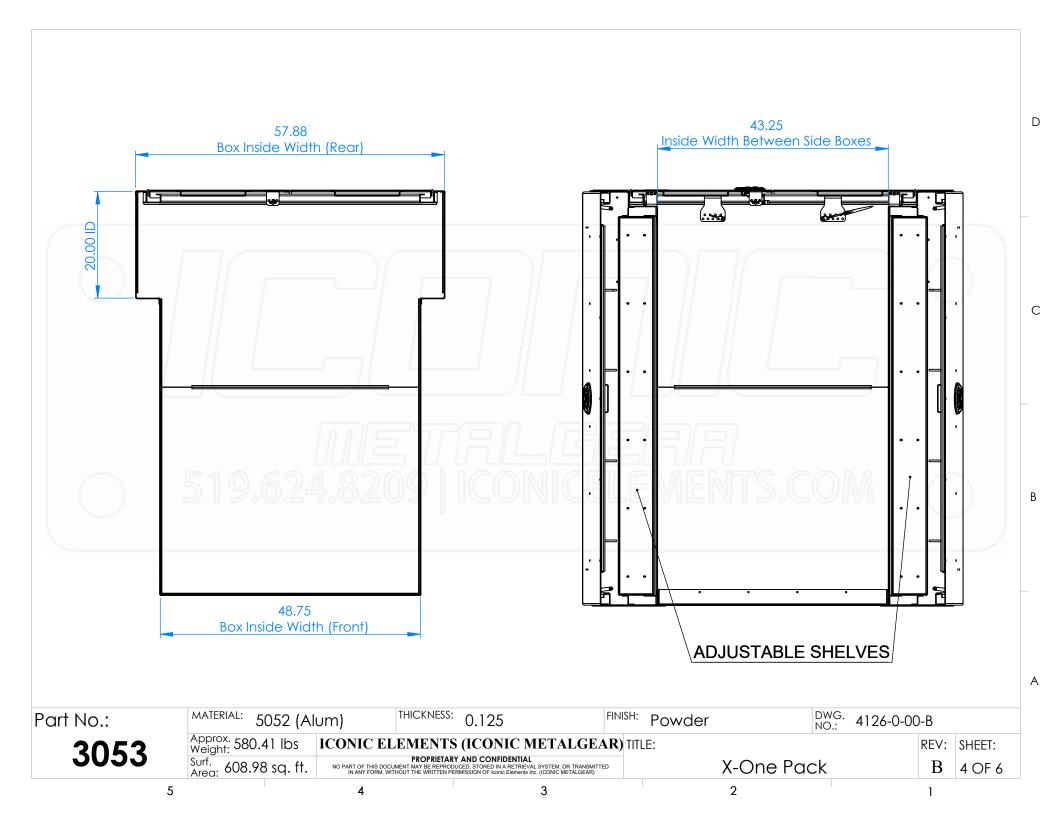

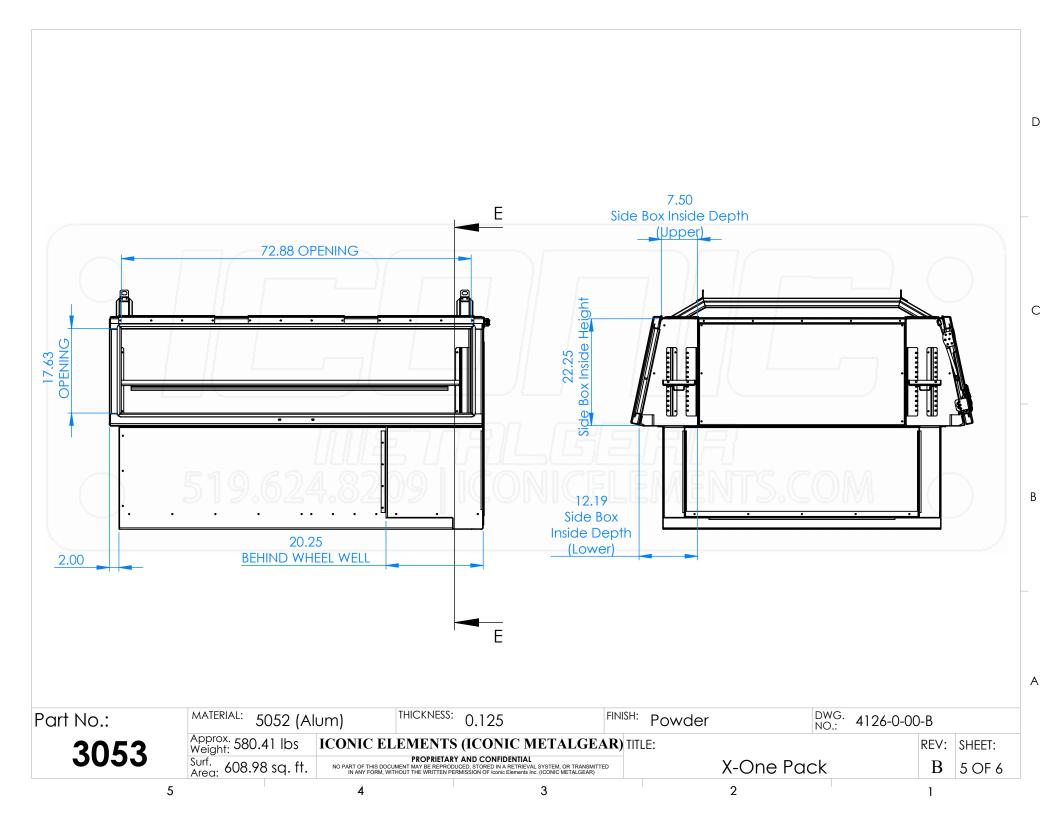



# **APPROX 3 HOURS INSTALL INSTALLATION GUIDE** (CONTACT AUTO SHOP FOR **HOOKING UP 3rd BRAKE LIGHT WIRING) CUT EXCESS OFF INCLUDED HARDWARE** TRUCK BED RAIL


SHEET 6 OF 6

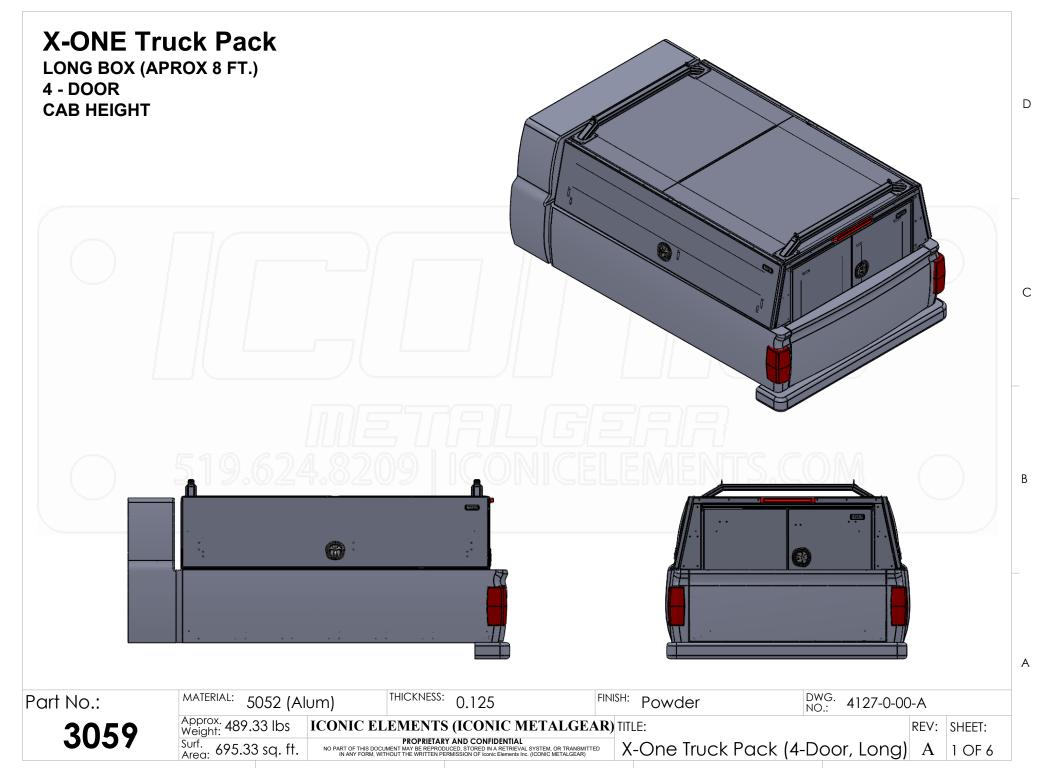



3 2

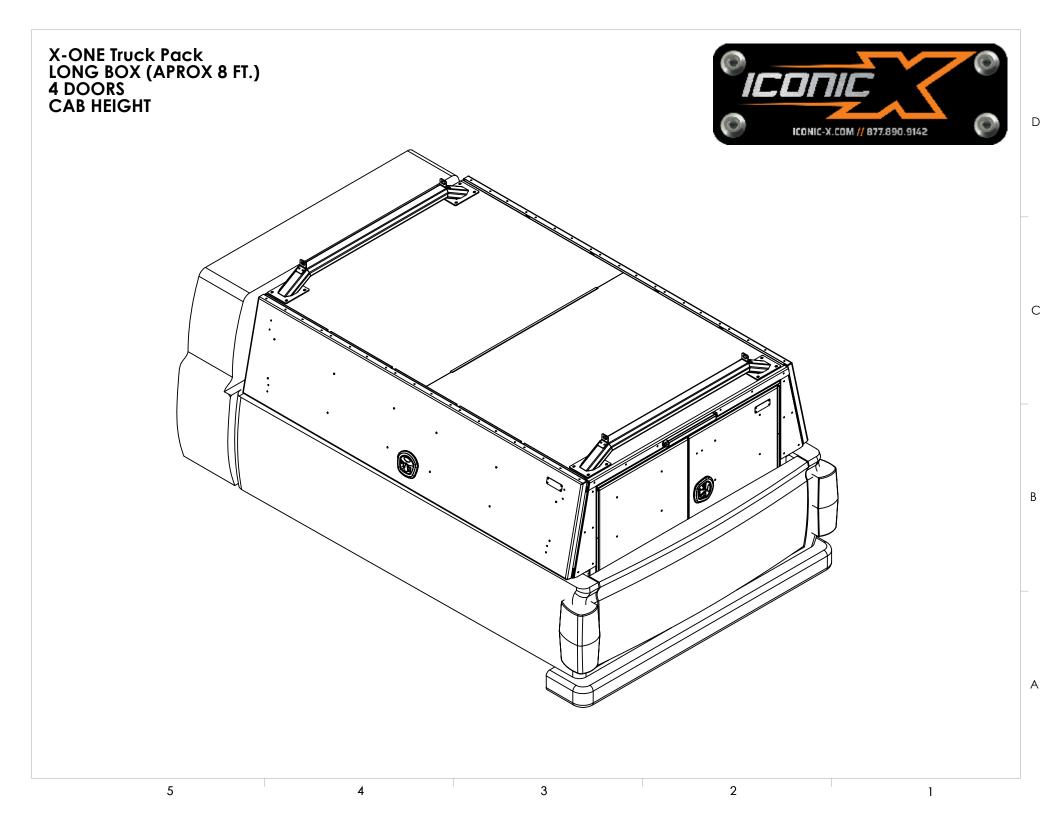


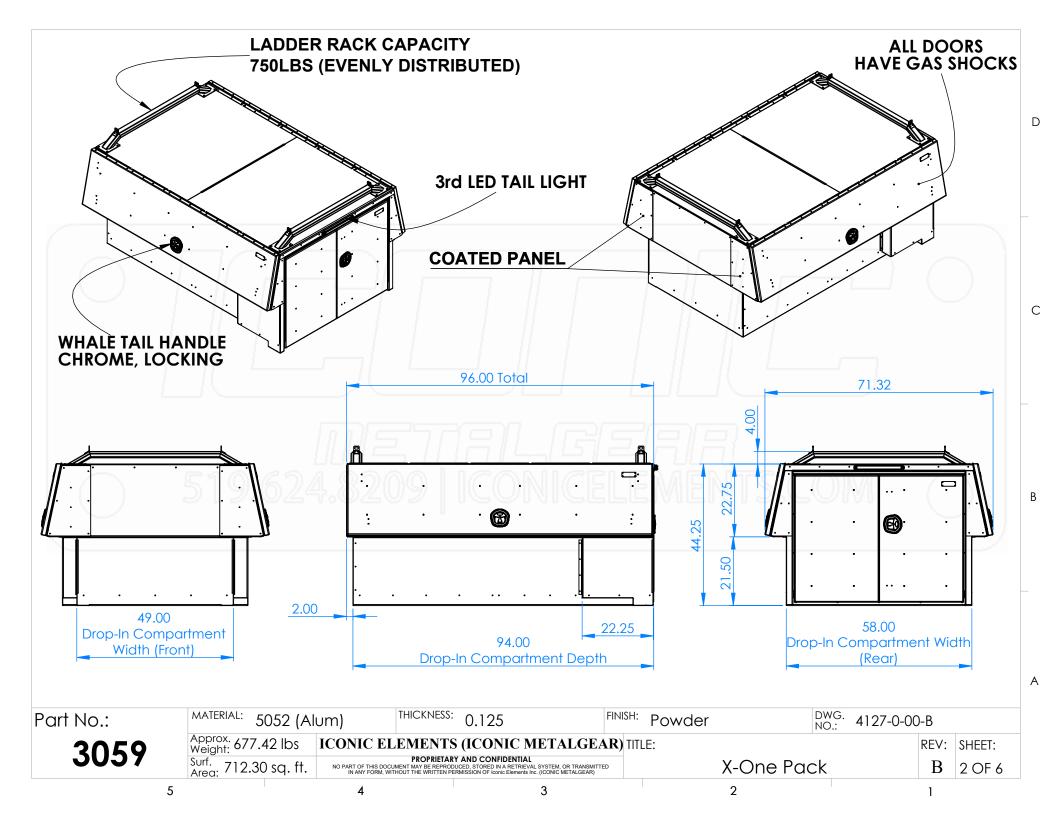

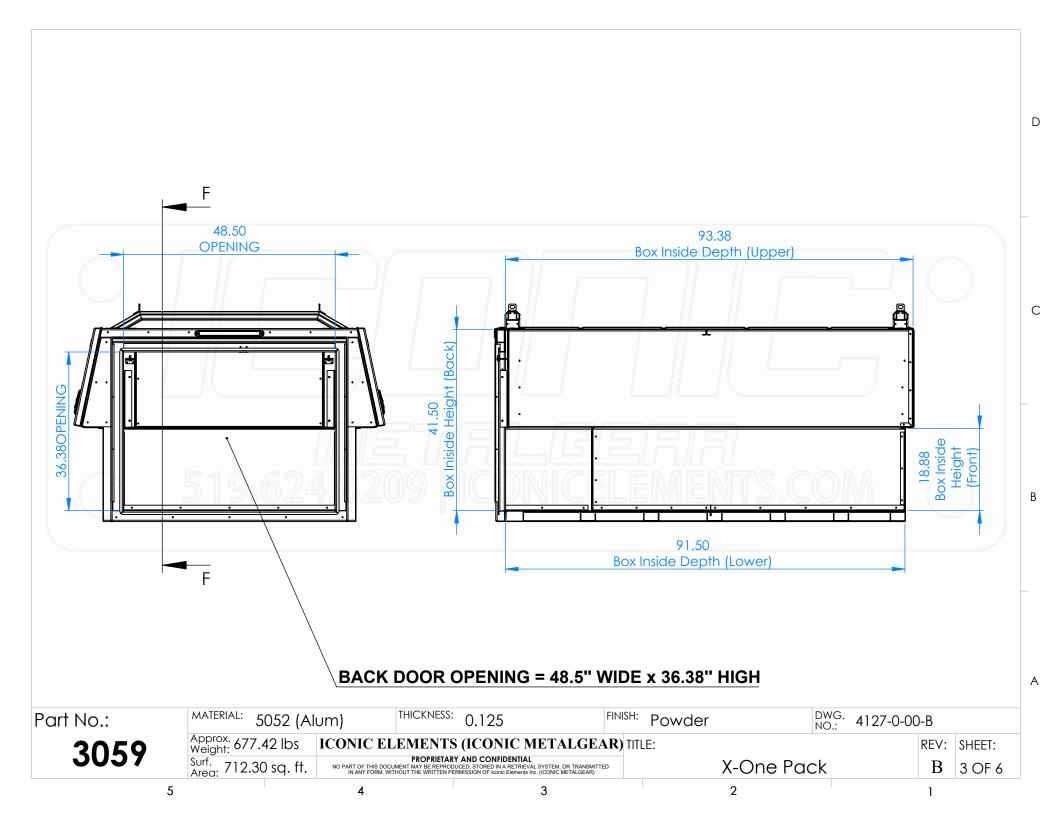

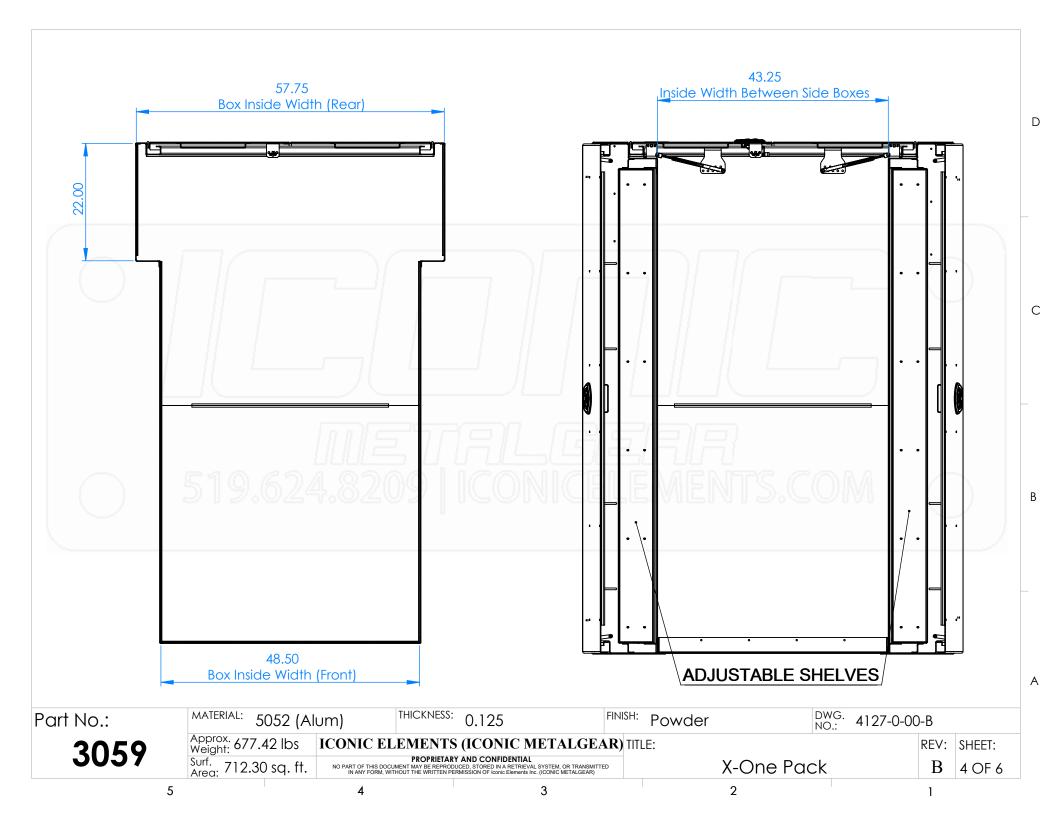


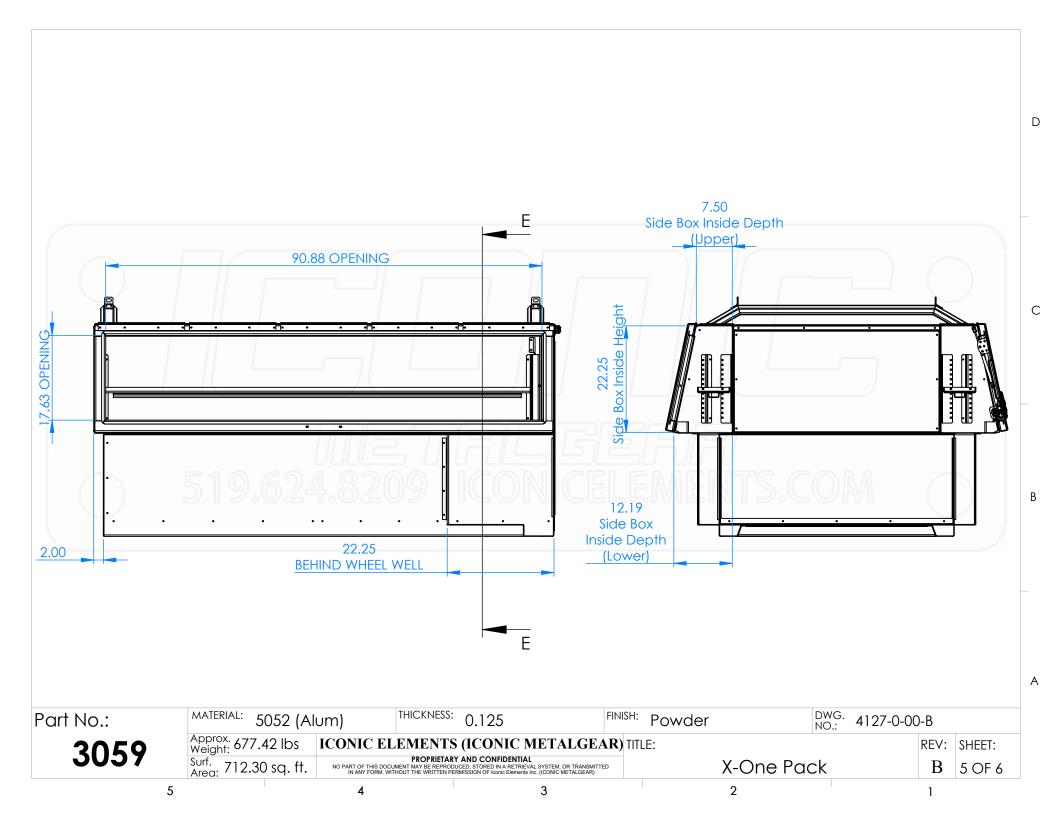

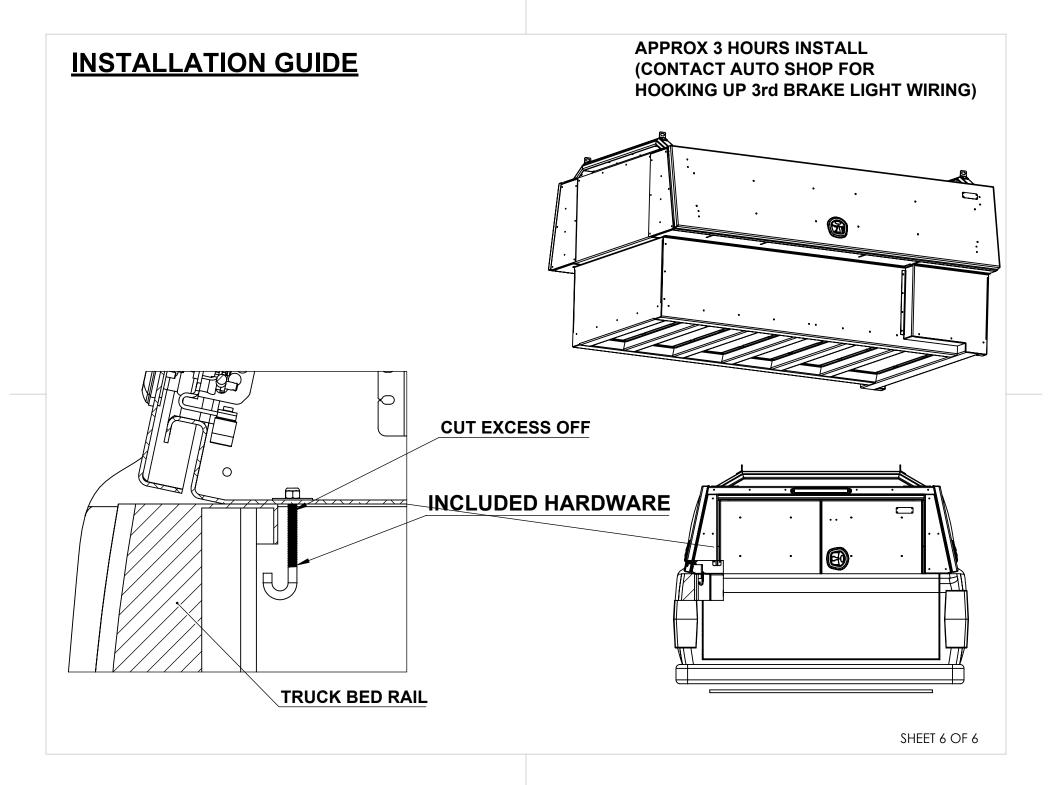




### **BED SIZES:**

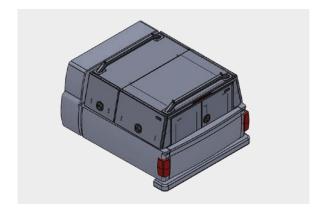


SHORT BOX (PAGE 3)

**GO TO SHORT BOX** 

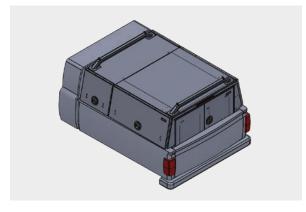

**REGULAR BOX** (PAGE 9)

**GO TO REGULAR BOX** 

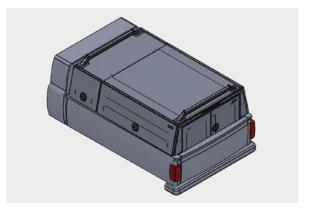

LONG BOX (PAGE 15)

**GO TO LONG BOX** 



### **NEW! FLIP UP REAR DOOR**


Choose to swap the X-ONE's standard rear barn doors for a single flip-up door. **Now available for every size and configuration.** 



### **X-ONE Truck Pack**

SHORT BOX (APROX 5.5 FT.) 6 - DOOR CAB HEIGHT



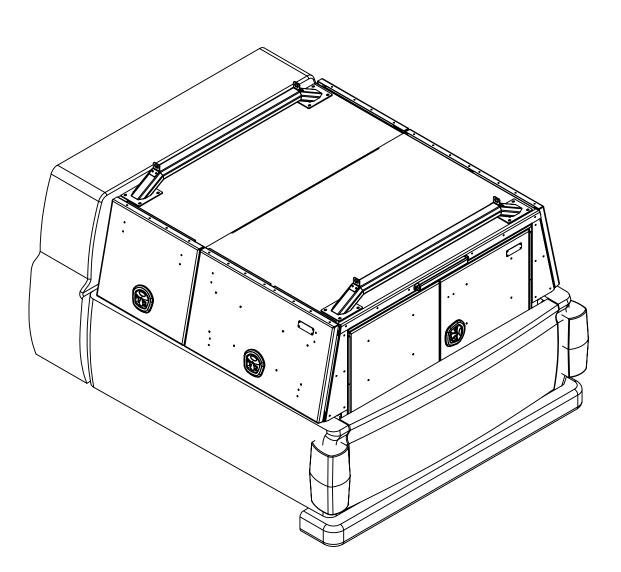



D


С


В

Α

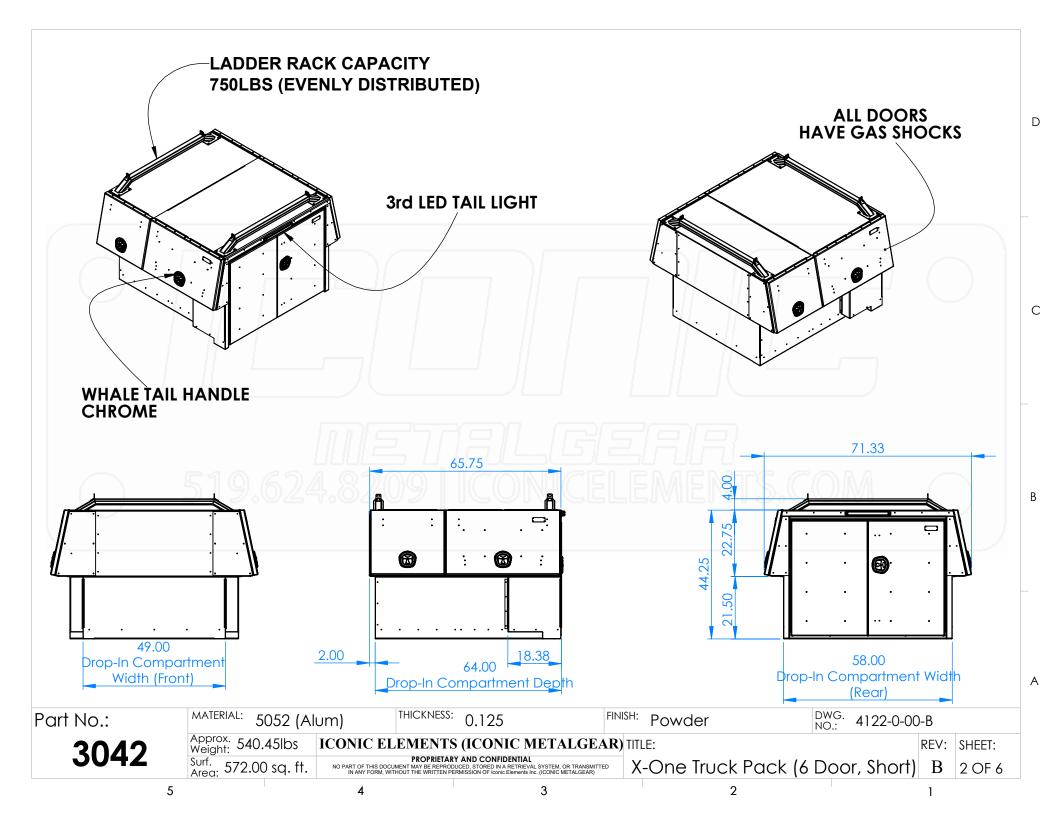

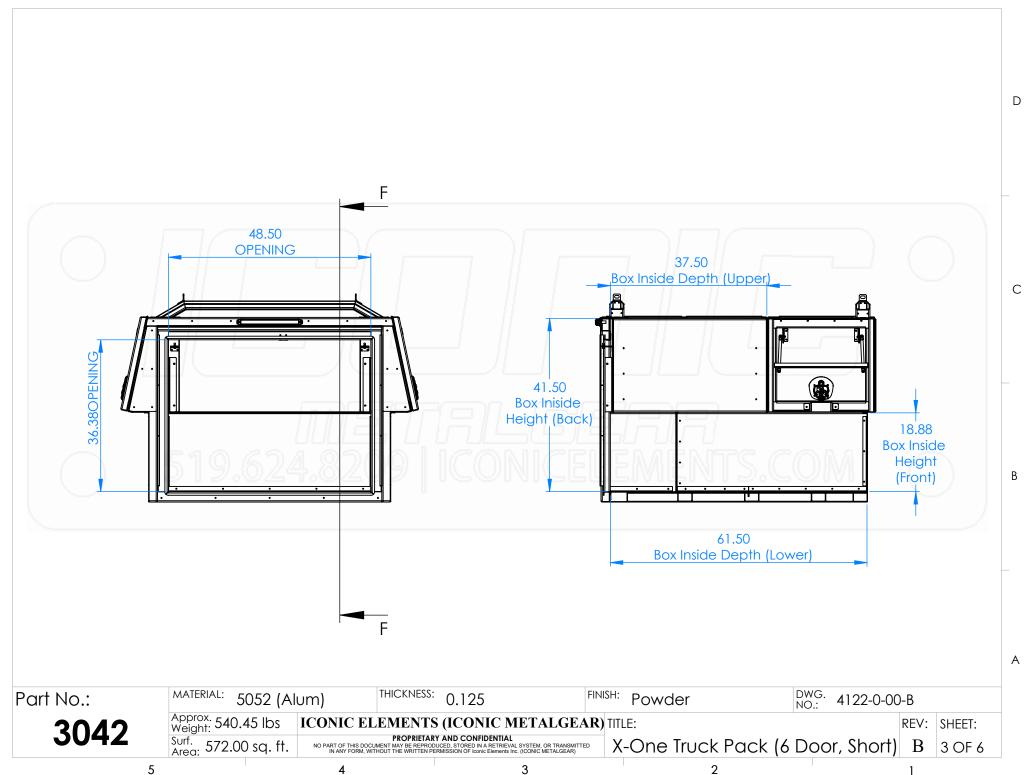

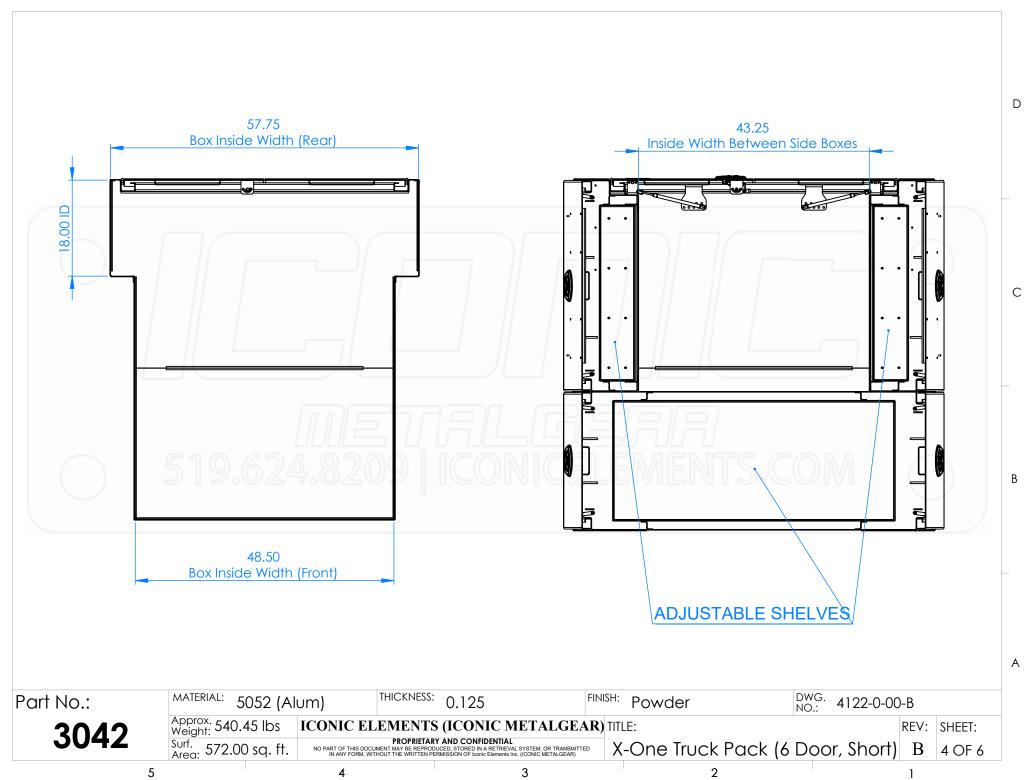

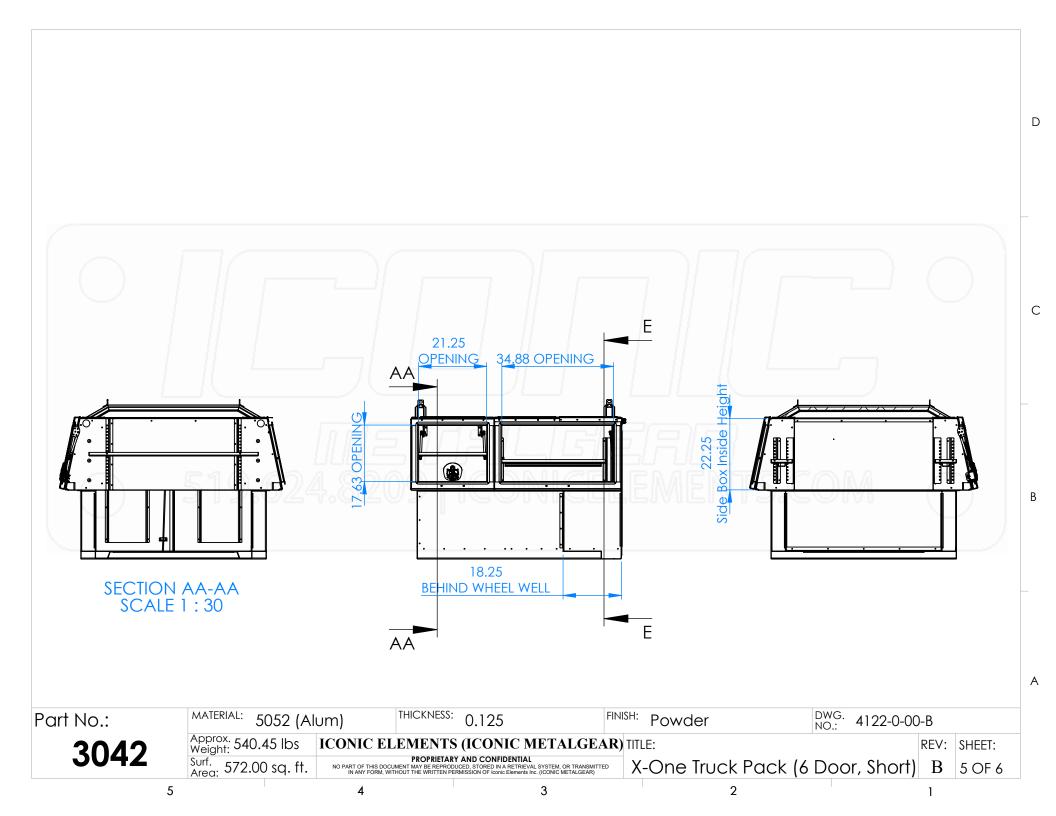


# **APPROX 3 HOURS INSTALL INSTALLATION GUIDE** (CONTACT AUTO SHOP FOR **HOOKING UP 3rd BRAKE LIGHT WIRING) INCLUDED HARDWARE TRUCK BED RAIL** SHEET 6 OF 6

#### X-ONE Truck Pack

REGULAR BOX (APROX 6.6 FT.) 6 - DOOR CAB HEIGHT



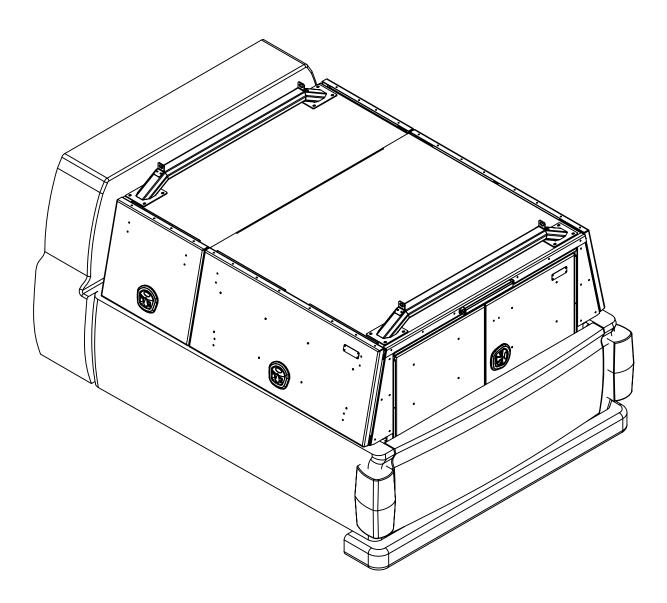



D


С


В

Α

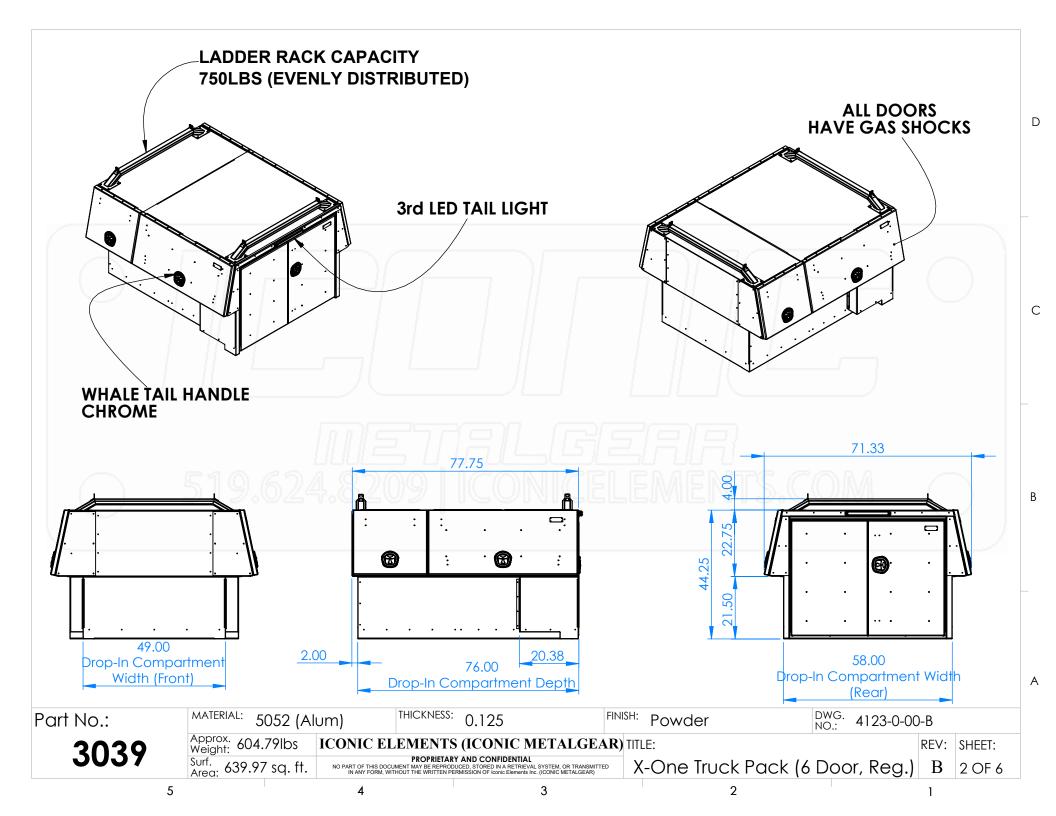

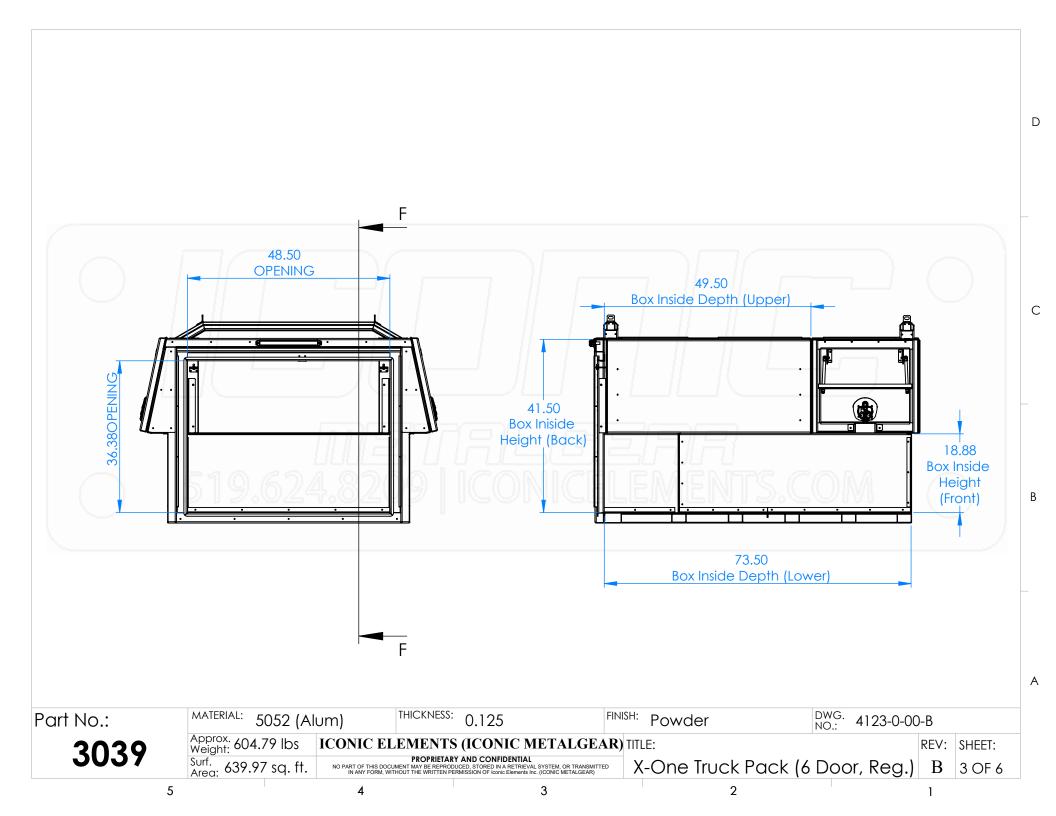

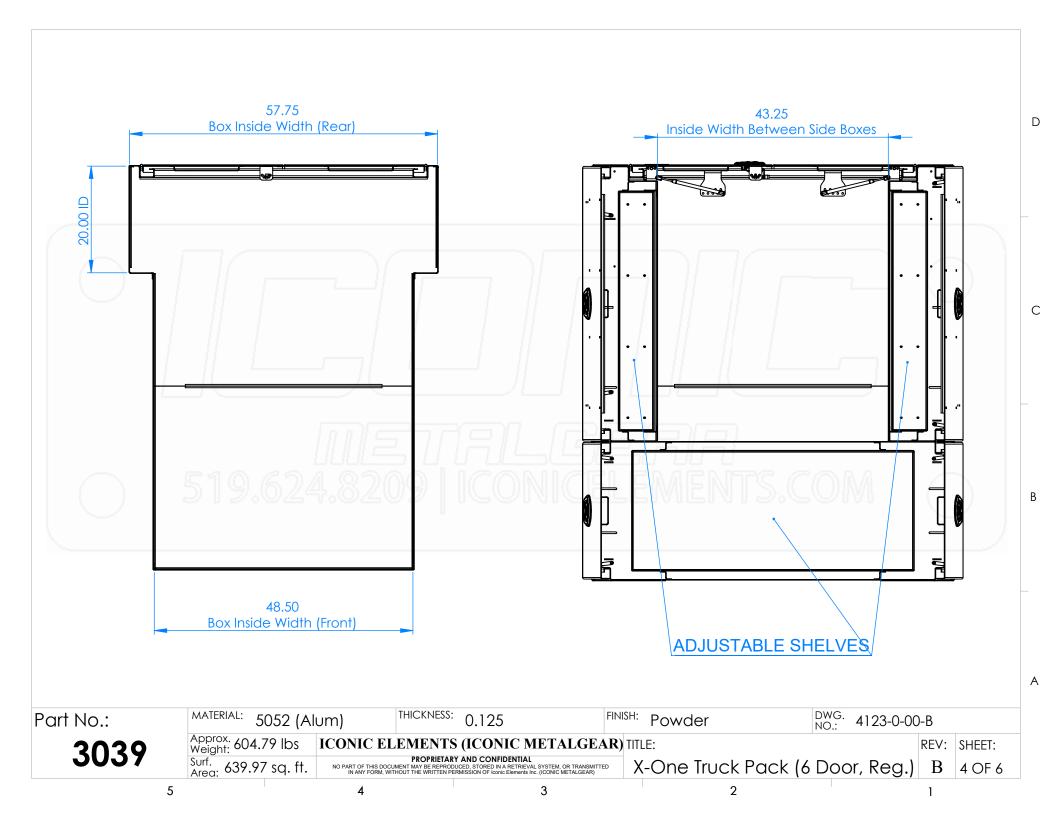

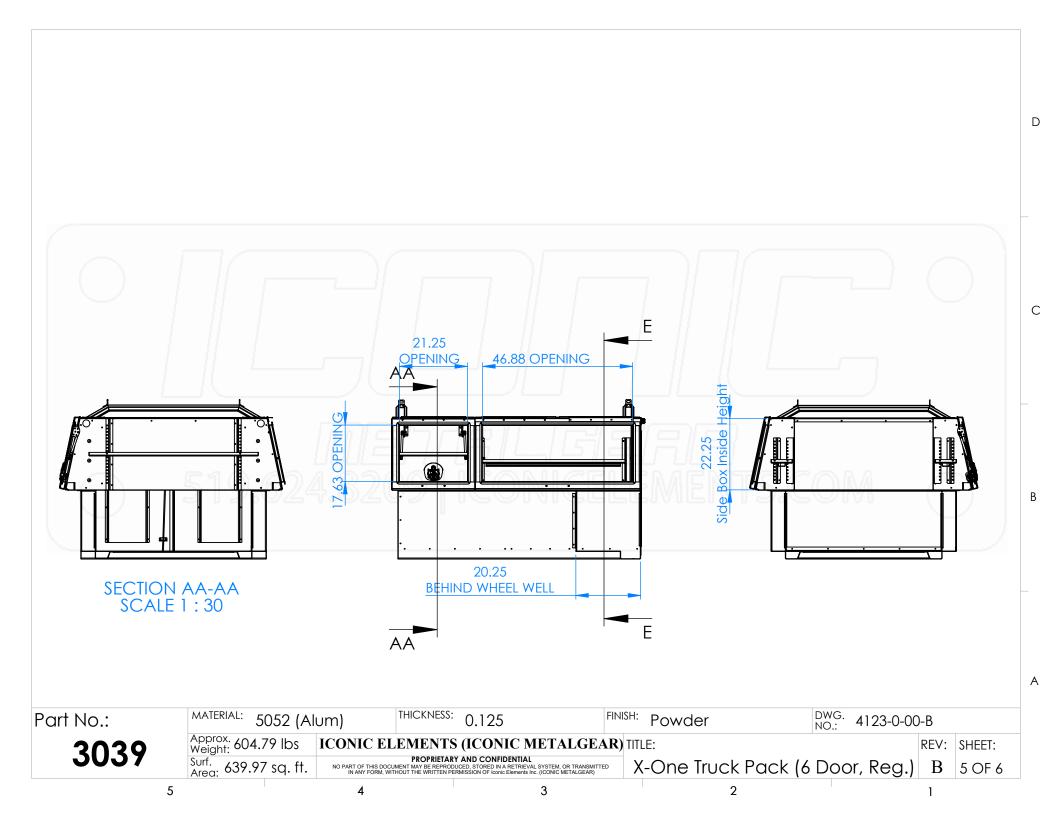


# **APPROX 3 HOURS INSTALL INSTALLATION GUIDE** (CONTACT AUTO SHOP FOR **HOOKING UP 3rd BRAKE LIGHT WIRING) INCLUDED HARDWARE** TRUCK BED RAIL SHEET 6 OF 6

#### X-ONE Truck Pack

LONG BOX (APROX 8 FT.) 6 - DOOR **CAB HEIGHT** 



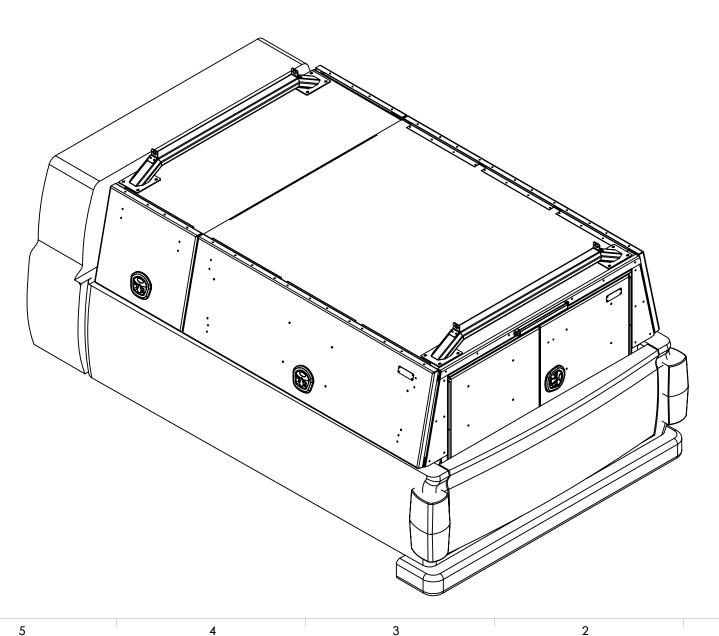



D


С


В


3 2

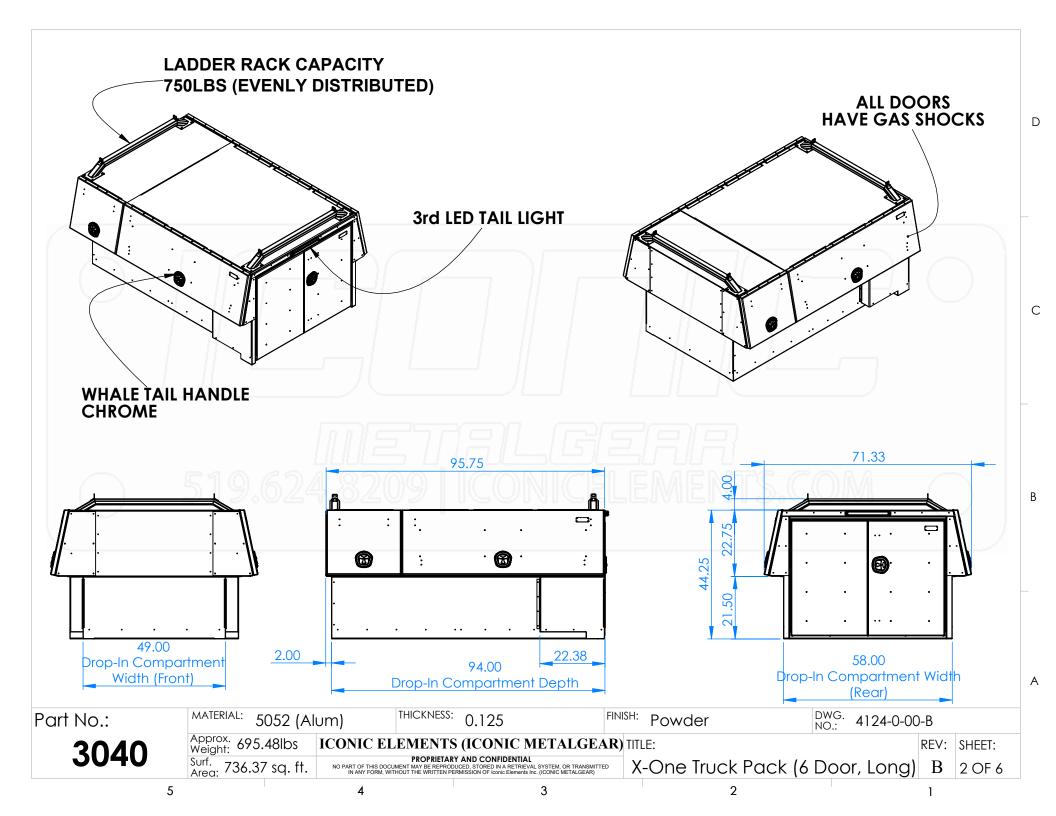

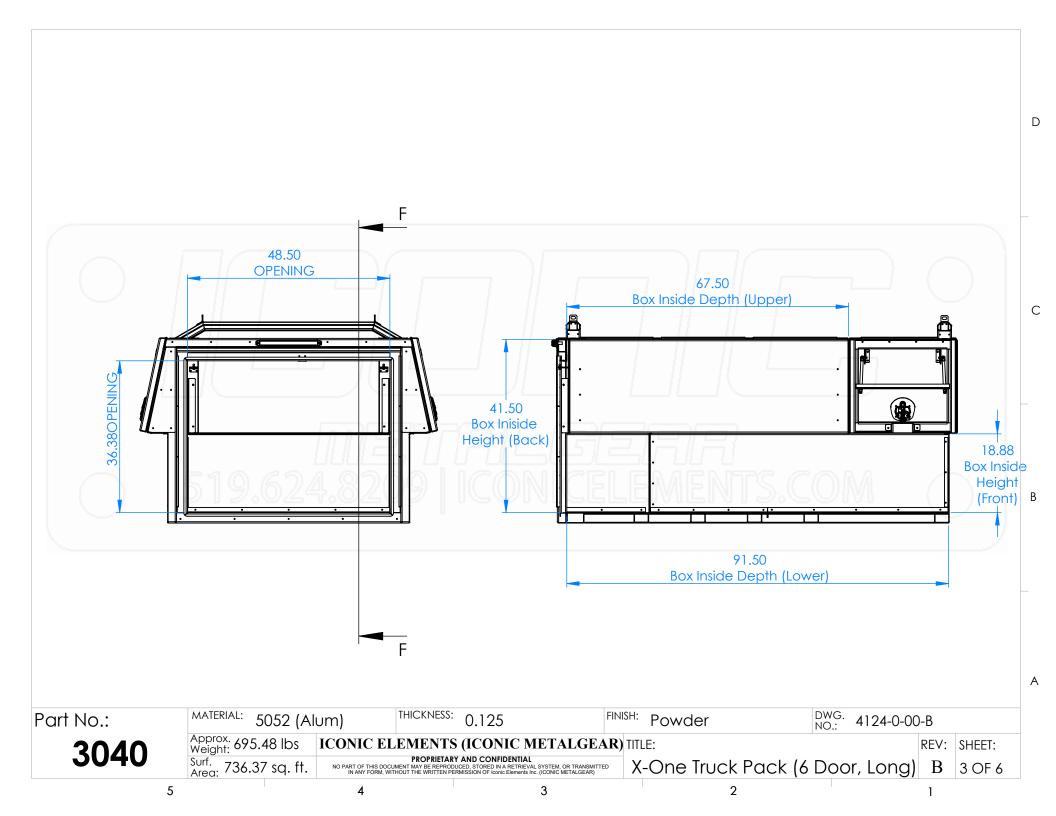

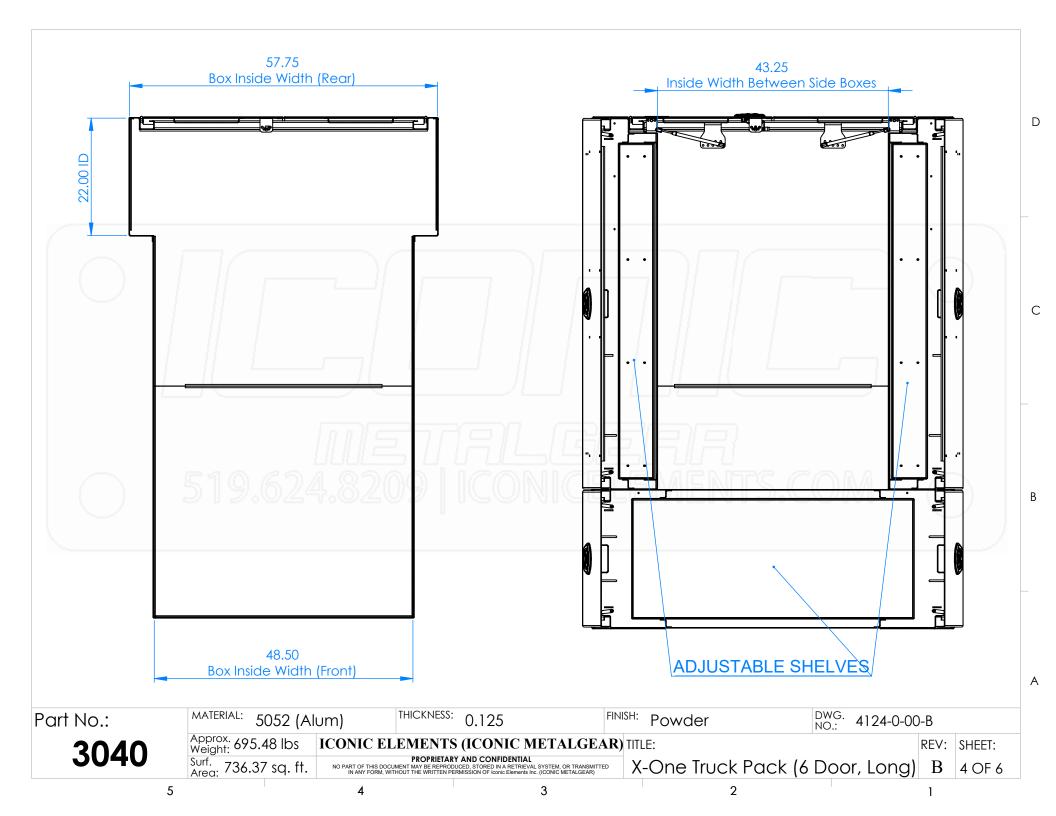


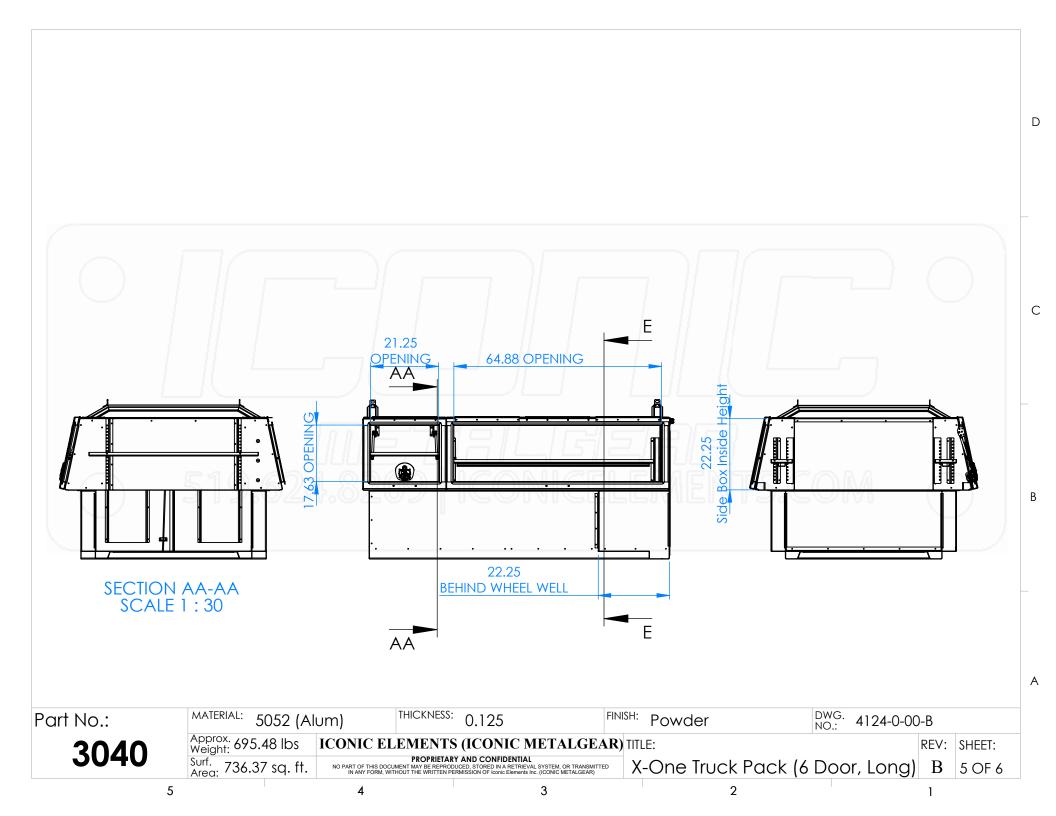

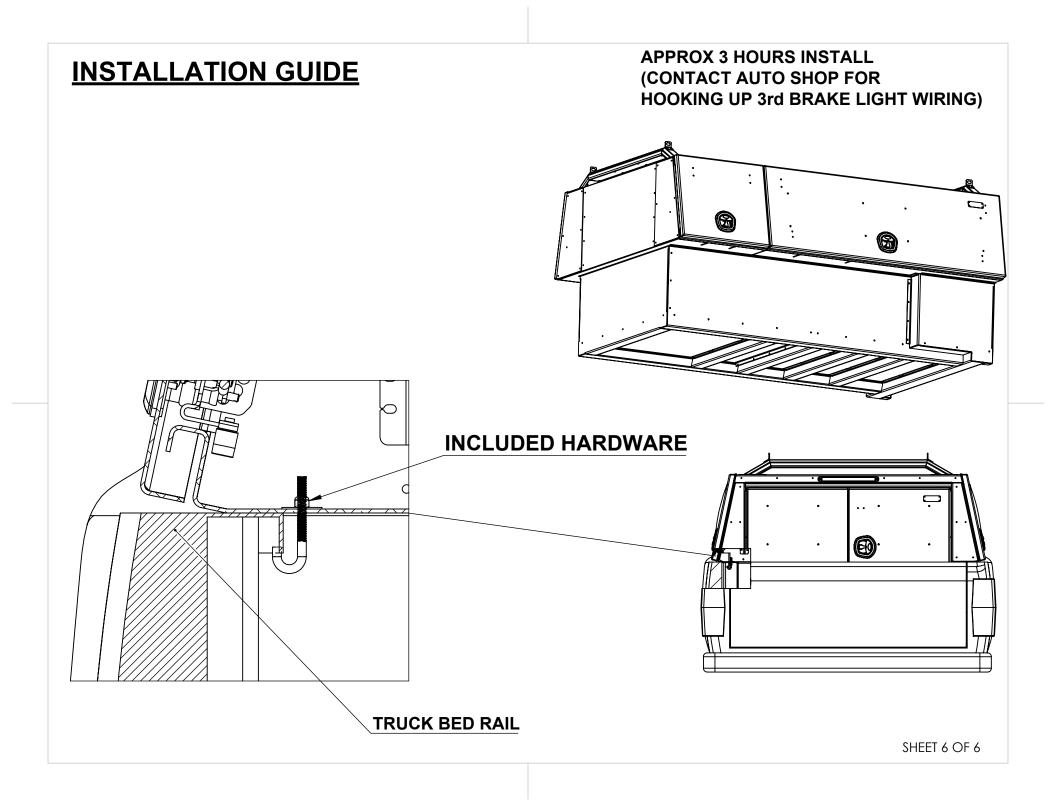




#### **BED SIZES:**

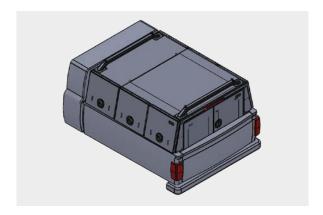

REGULAR BOX (PAGE 3)

**GO TO REGULAR BOX** 

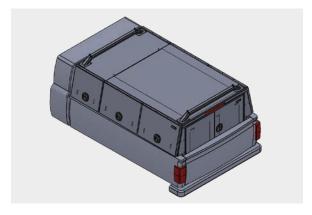

LONG BOX (PAGE 9)

**GO TO LONG BOX** 



### **NEW! FLIP UP REAR DOOR**


Choose to swap the X-ONE's standard rear barn doors for a single flip-up door. **Now available for every size and configuration.** 



#### **X-ONE Truck Pack**

REGULAR BOX (APROX 6.6 FT.) 8 - DOOR CAB HEIGHT



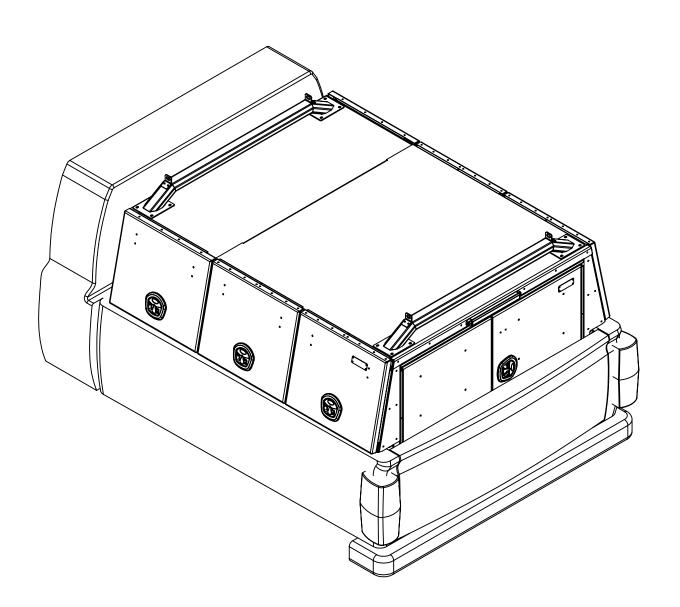


D


С


В


Α

5 4 3 2

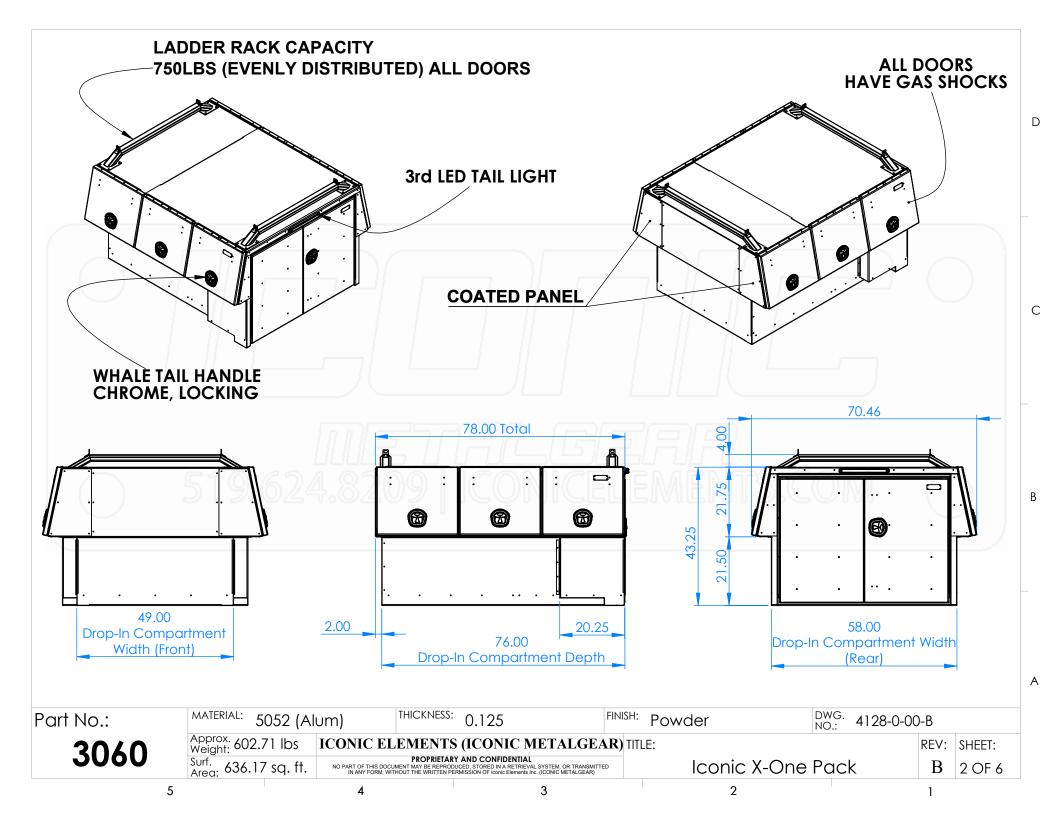

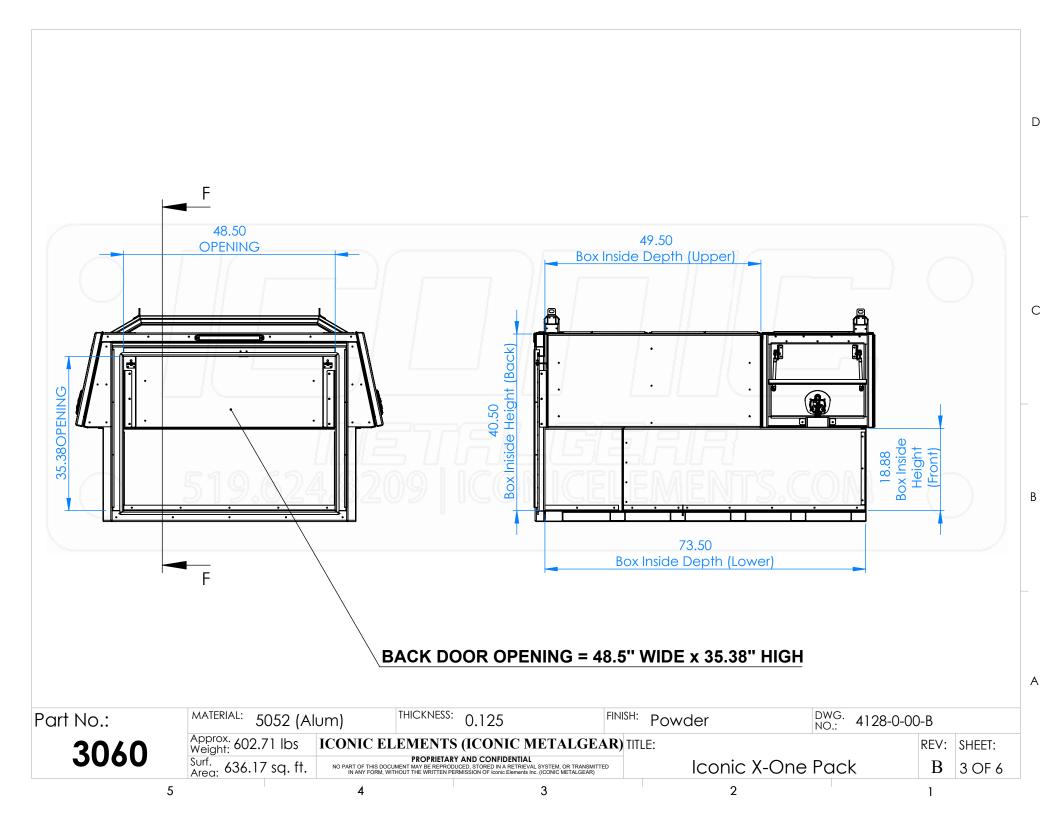


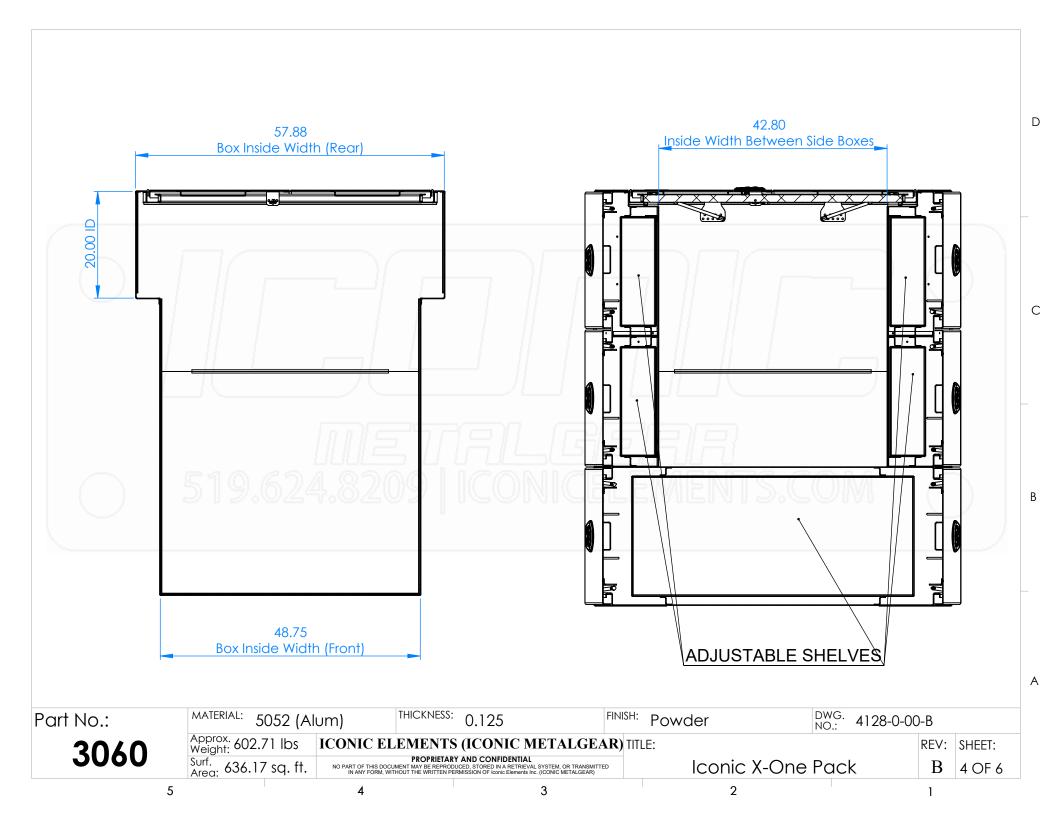

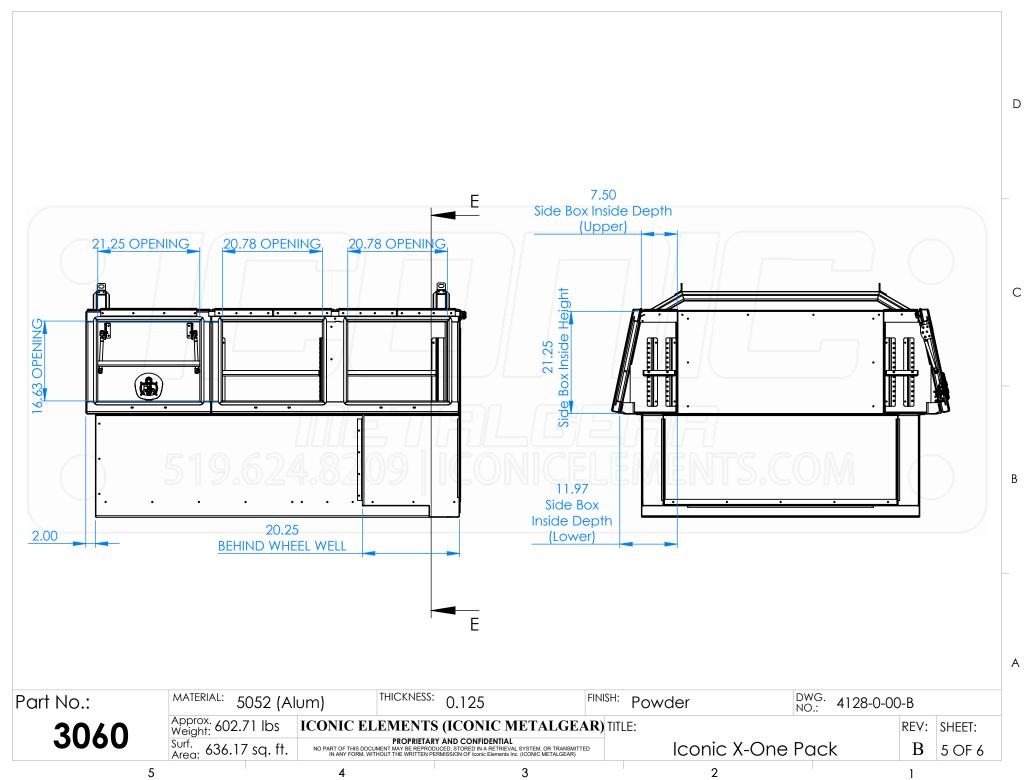


#### **INSTALLATION GUIDE**

#### **APPROX 3 HOURS INSTALL** (CONTACT AUTO SHOP FOR **HOOKING UP 3rd BRAKE LIGHT WIRING)**

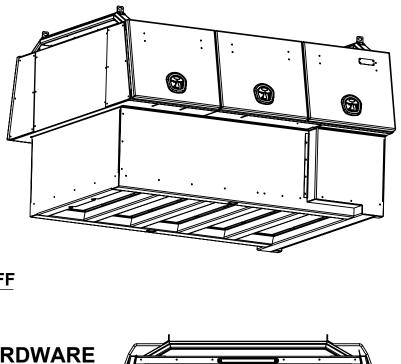



**INCLUDED HARDWARE** 

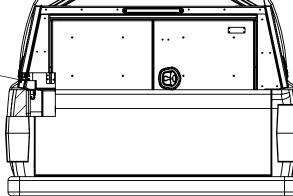


TRUCK BED RAIL

#### **X-ONE Truck Pack**

LONG BOX (APROX 8 FT.) 8 - DOOR CAB HEIGHT



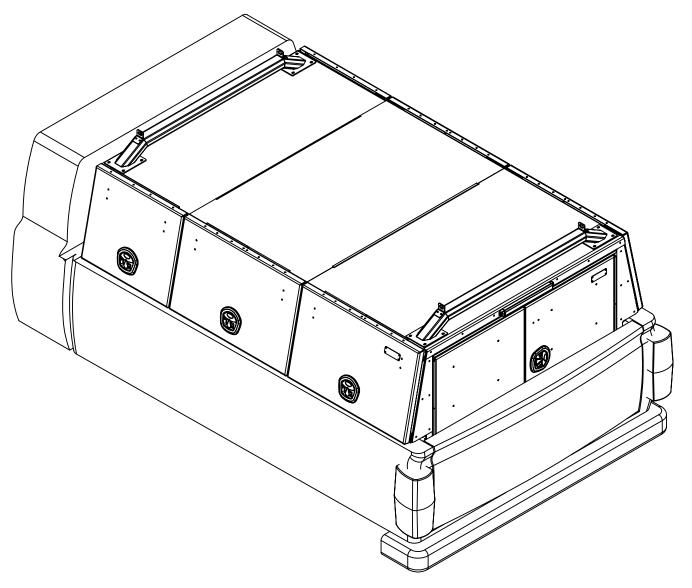



В


С


Α

5 4 3 2

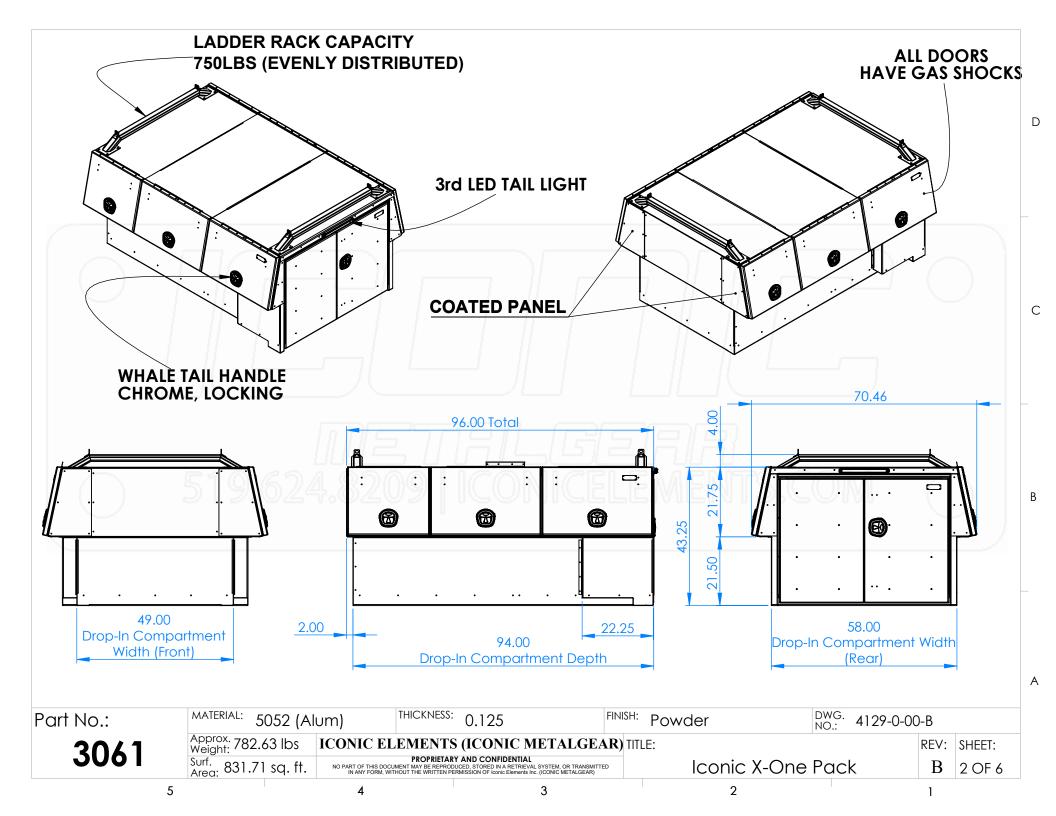

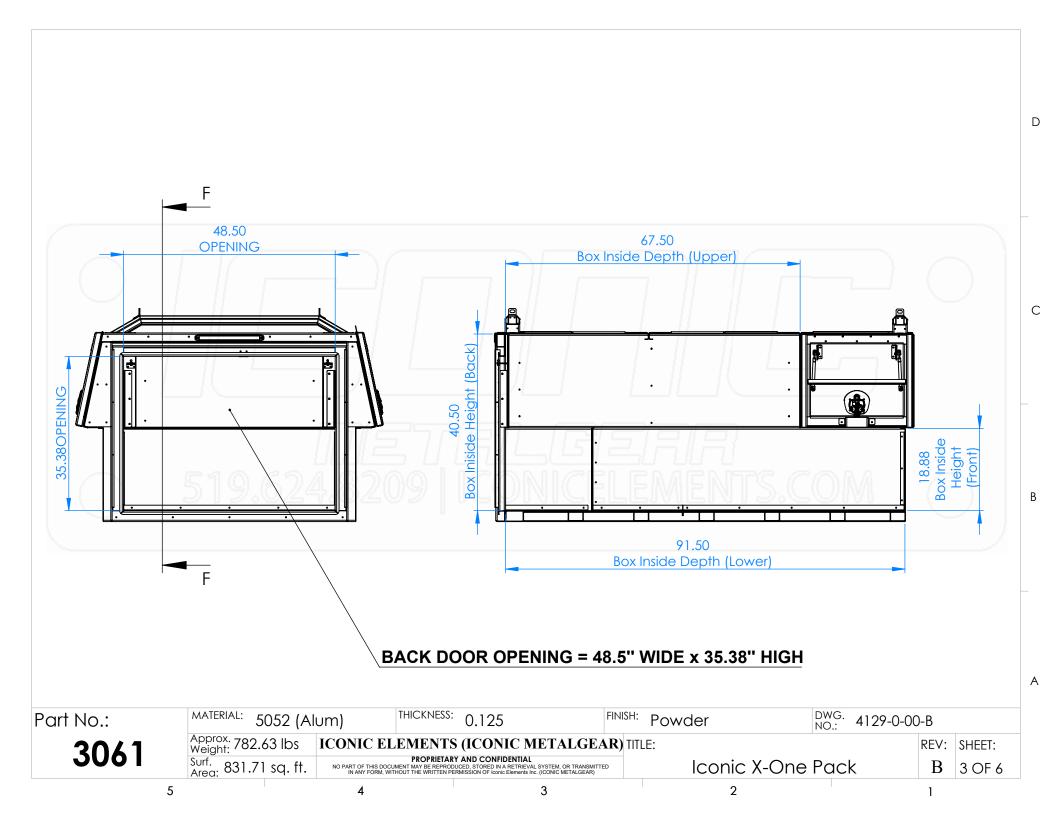

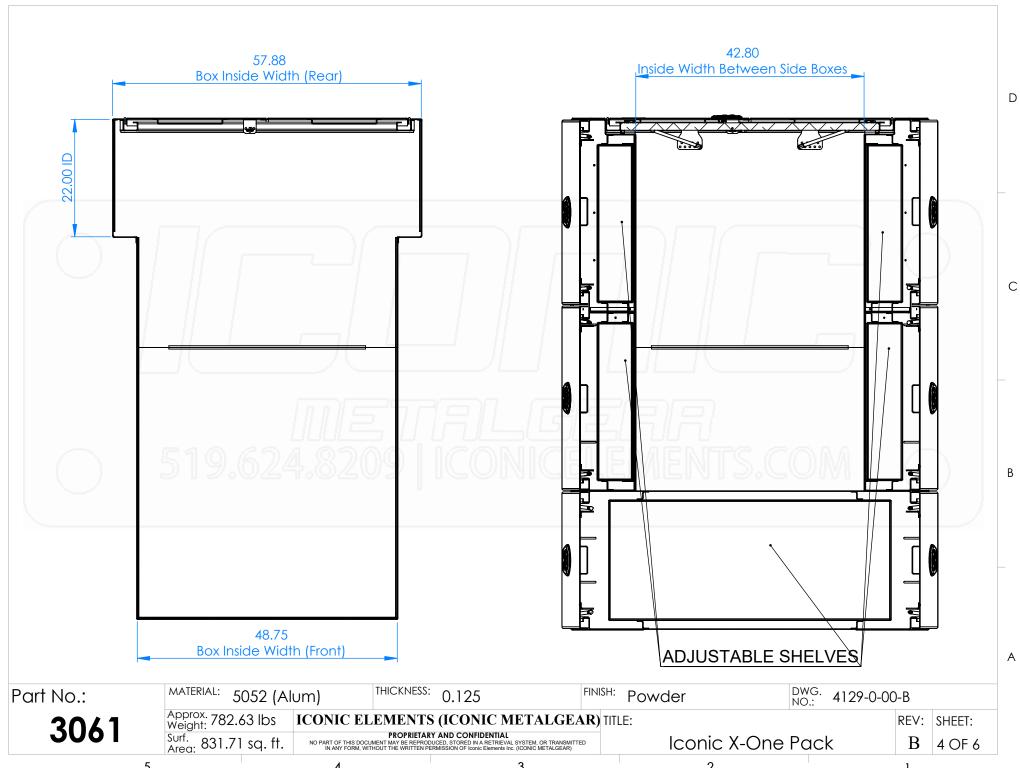

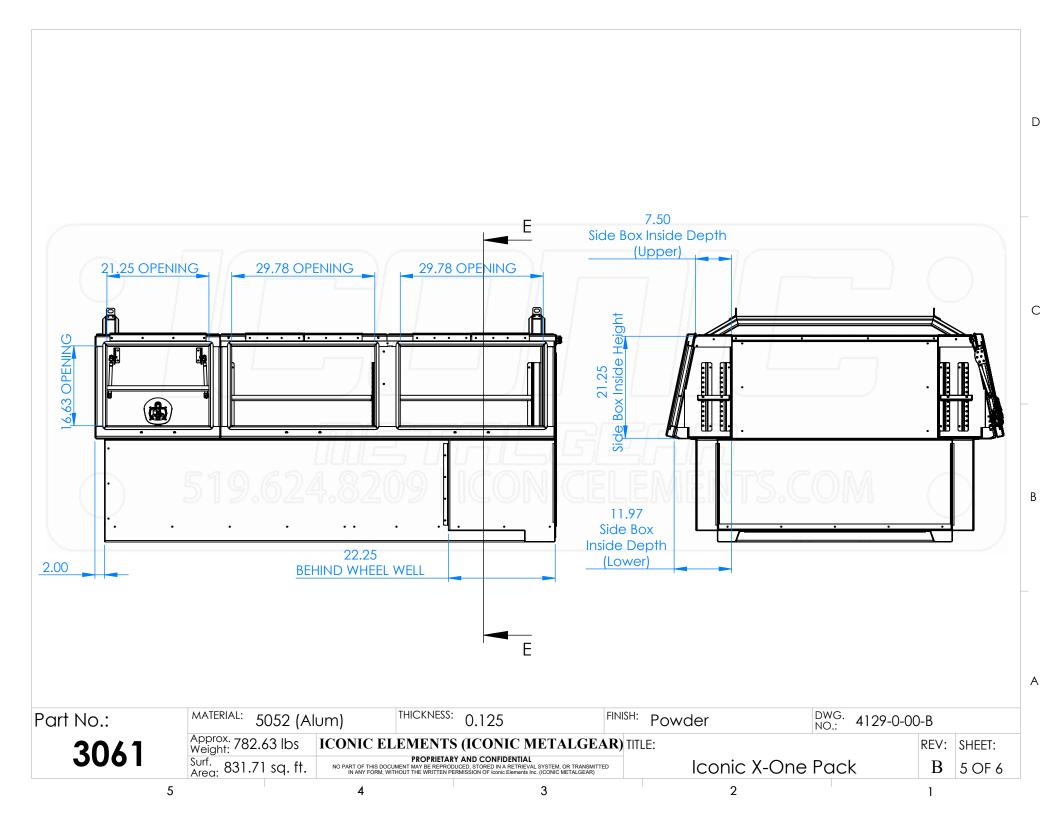

## **APPROX 3 HOURS INSTALL INSTALLATION GUIDE** (CONTACT AUTO SHOP FOR **HOOKING UP 3rd BRAKE LIGHT WIRING) CUT EXCESS OFF INCLUDED HARDWARE** TRUCK BED RAIL SHEET 6 OF 6